



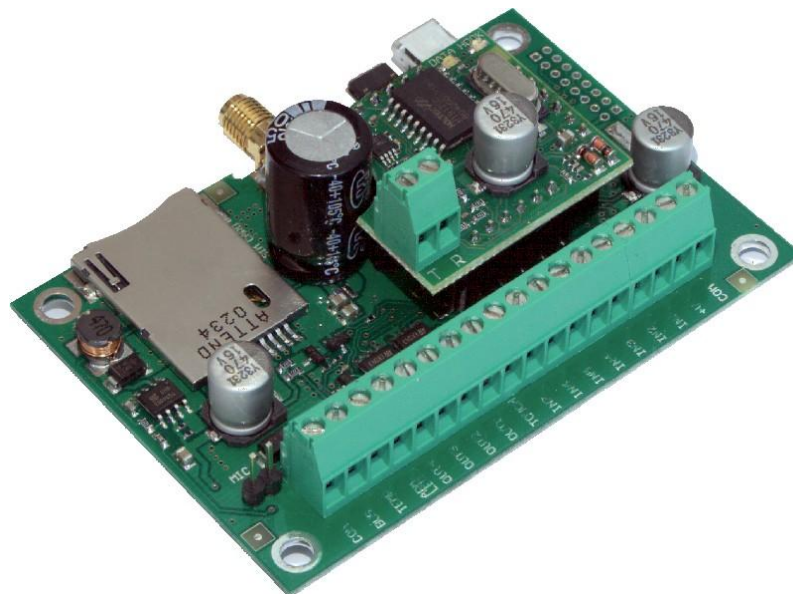

SERA

GTCOM v1 configuration and testing software in Microsoft Windows environment

User's guide

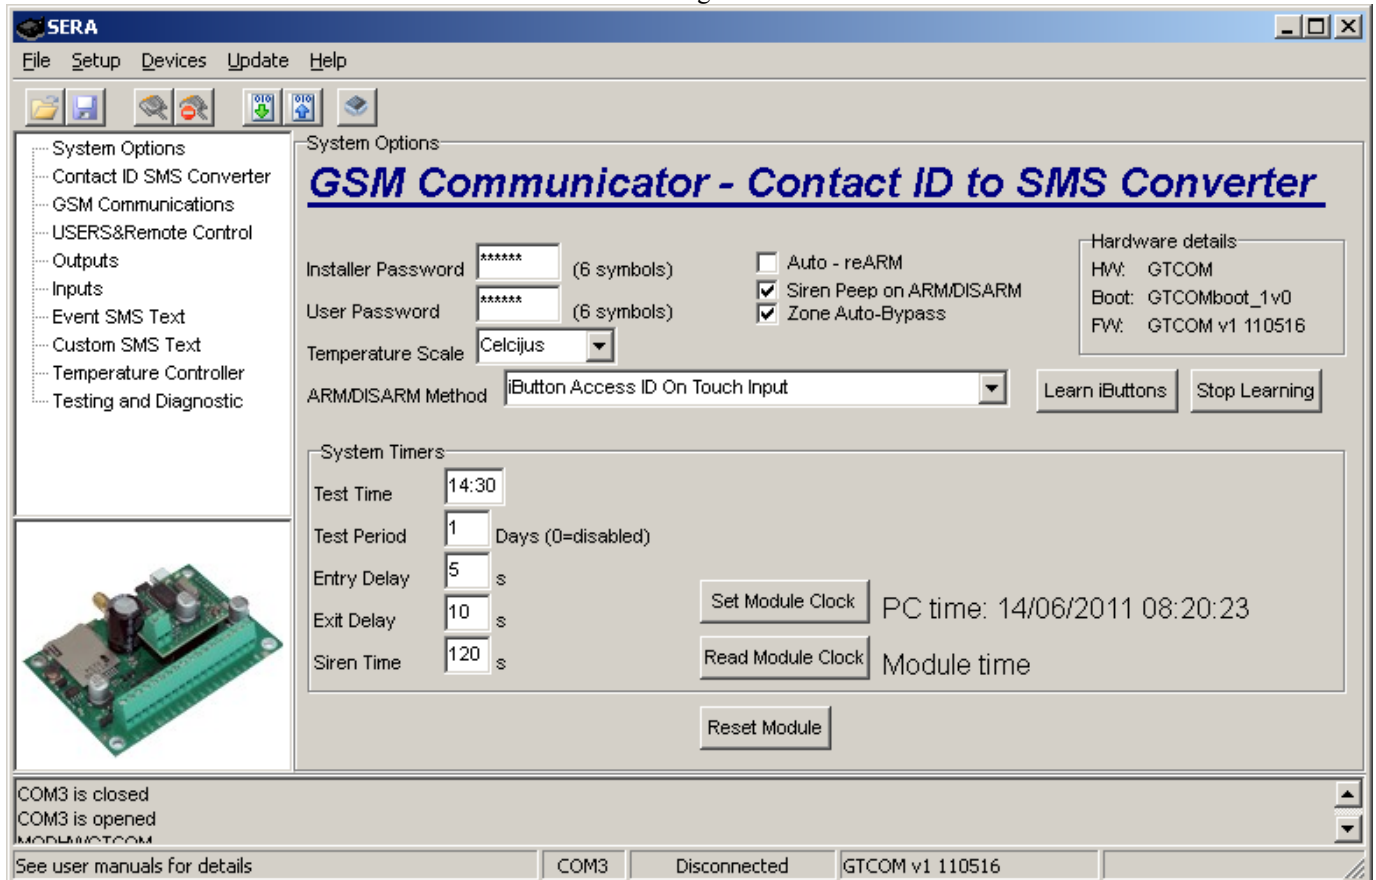

Content

1. Installation of SERA software	2
2. USB drivers installation.....	4
3. COM port number setting.....	10
4. Connection of the module to your PC	12
5. Work with the software SERA	12
5.1. Content of the module configuration	14
5.2. Main Window of the software SERA (System options)	15
5.3. Window Communicator Contact ID Codes to SMS Converter	18
5.4. Window [GSM communication options]	20
5.5. Remote Control by Dialling (Remote Control by Dialling).....	22
5.6. Window [Outputs].....	23
5.7. Window [Inputs]	25
5.8. Window Event SMS Text	28
5.9. Window [Text summary]	29
5.1. Window Temperature Controller	30
5.2. Window [Testing and Diagnostic window]	31
6. Saving module configuration into the file	33
7. Installing of saved configuration into the module	33
8. Updating of firmware	35

1. Installation of SERA software

Open the folder containing installation of the software SERA. Click the file „SERA setup.exe“ from the mentioned folder.

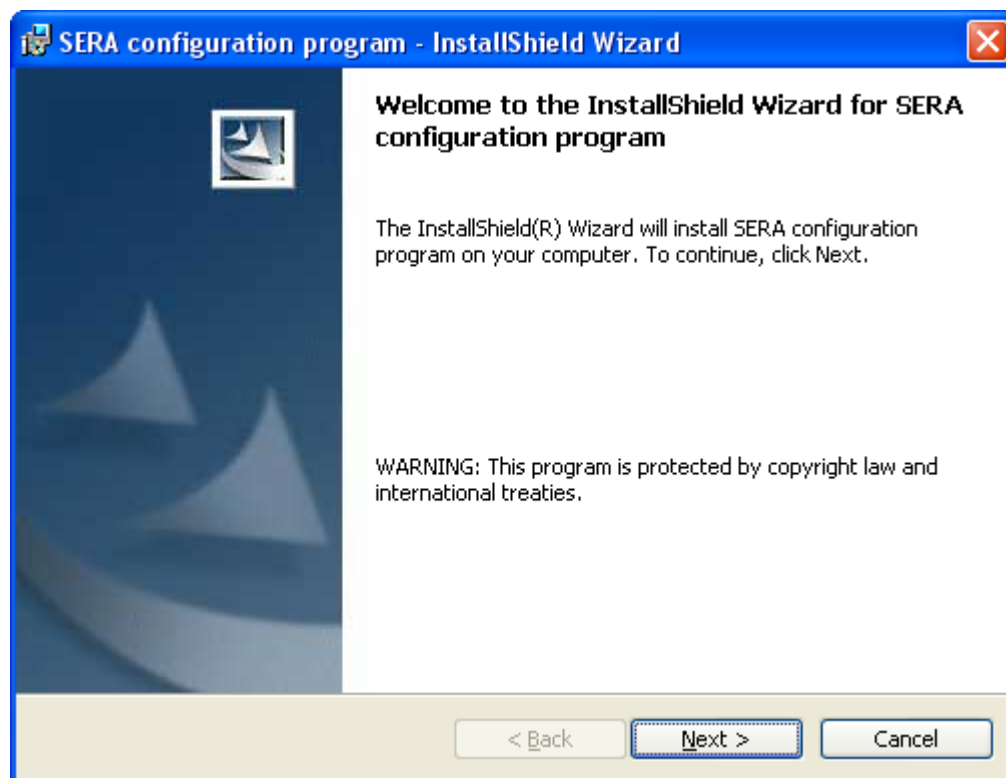


Fig. 1

In the displayed Window Fig. 1 press [Next>].

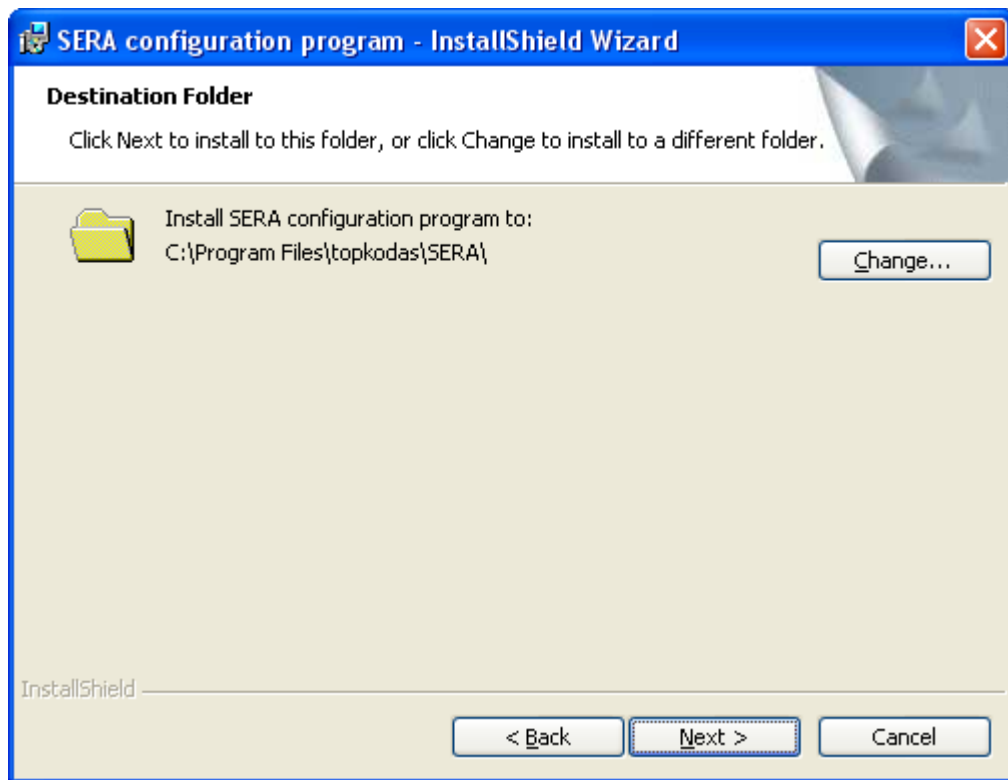


Fig. 2

Installation directory will be displayed in the Window Fig. 2 (fig.2). If installation directory of the software is OK, press [Next]. If you want to install the software into other directory, press Change. Locate the another directory to install the software and press Next.

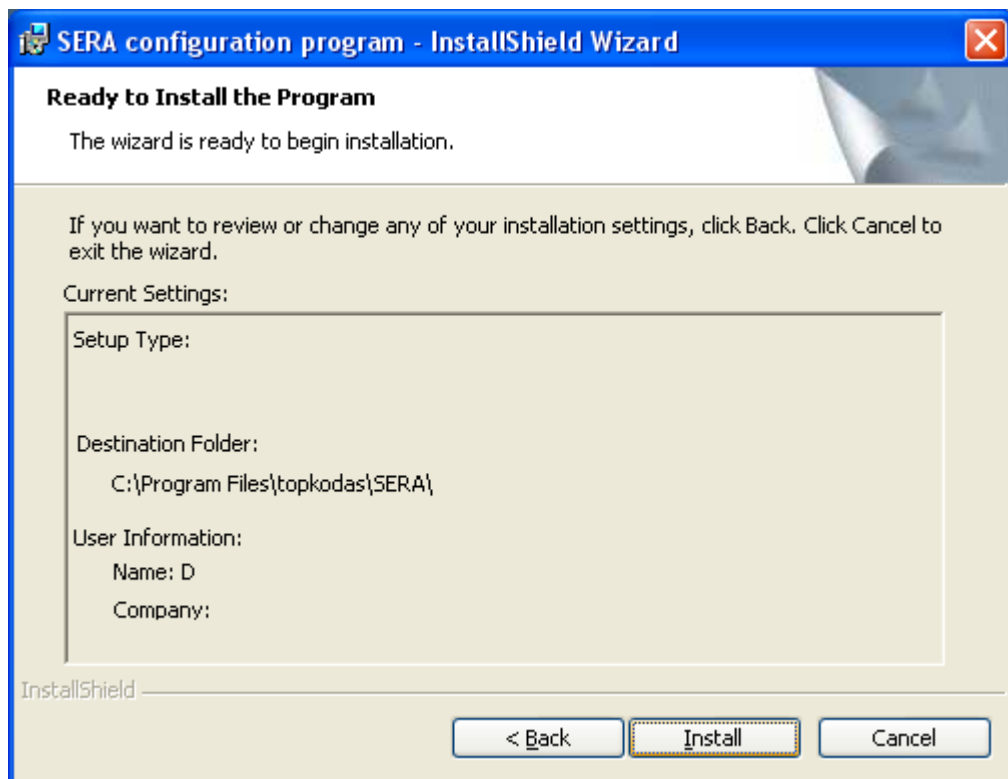


Fig. 3

Check if the correct data are entered and press Install in the displayed Window (Fig. 3) (Fig.3).

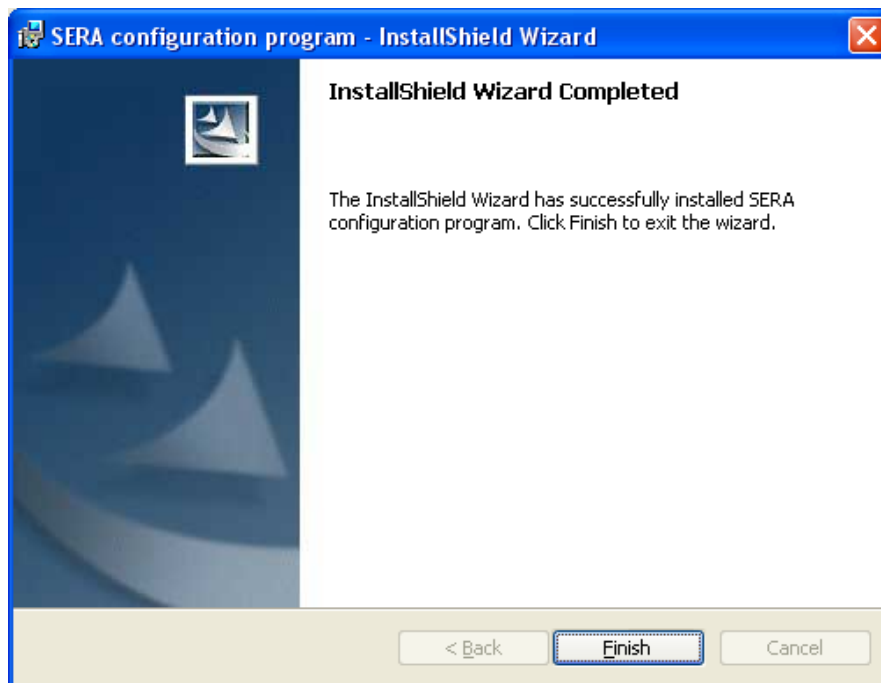


Fig. 4

After successful installation of the software SERA, press [Finish] in the displayed Window Fig. 4 .

Congratulations, you have successfully installed the application SERA in your PC.

2. USB drivers installation

In order to configure the module via USB interface, it is necessary to install USB DRIVER. Drive configuration is available in the file usbser.inf

After connection of USB cable (the module must be supplied with + 12V) to the PC via USB interface, OS Windows will find USB driver.

Driver configuration:

Winows 2000/XP

usbser.inf .

Windows 7 x86 or x64

usbser_x86_x64.inf



Fig. 5

Select [„No, not this time“] in the displayed Window (Fig.5) and press [„Next>“].

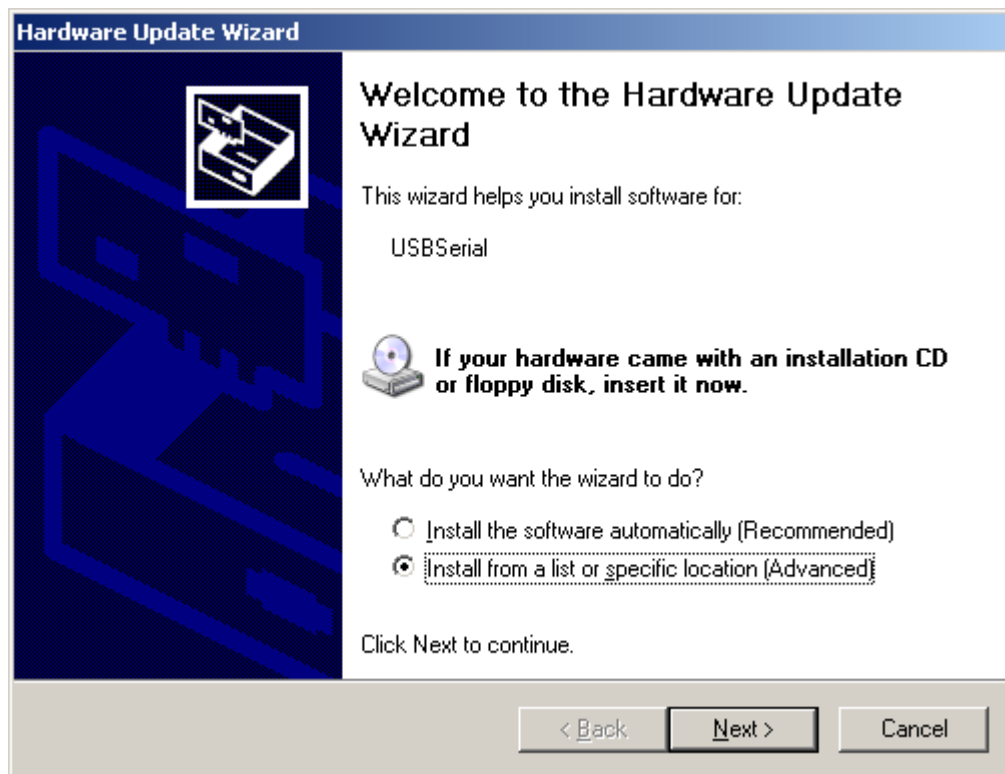


Fig. 6

Select „Install from a list or specific location (Advanced)“ and press „Next>“ in the displayed Window (Fig.6).



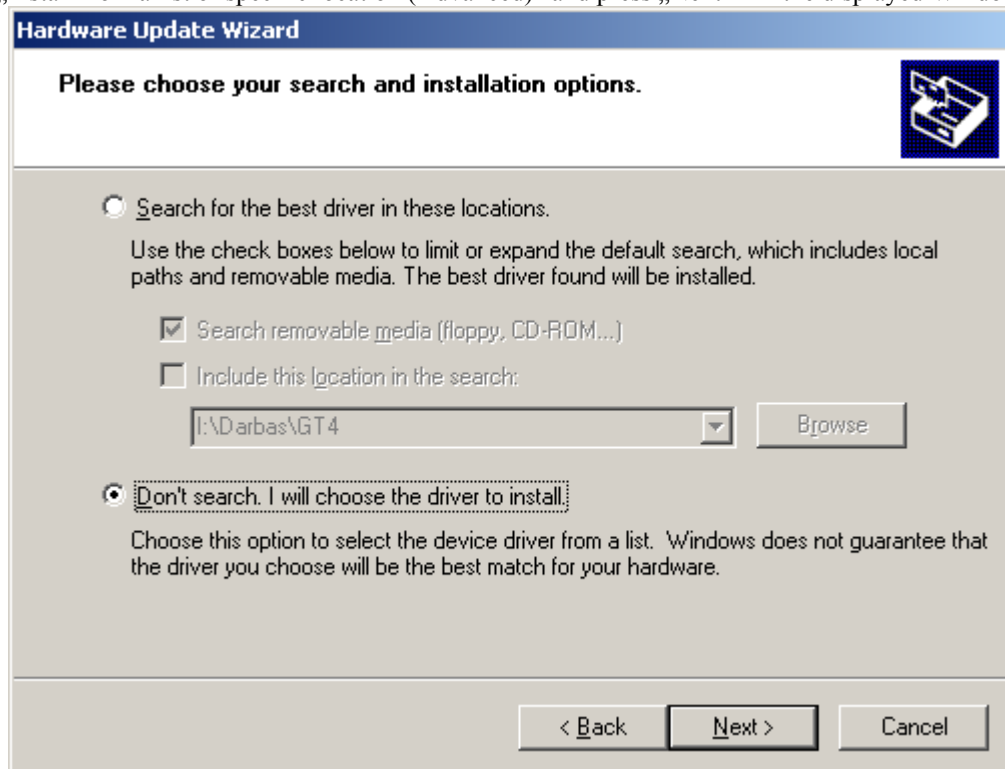


Fig. 7

In the displayed Window (fig. 7) select : Don't search I will choose the driver to install. Press Next>

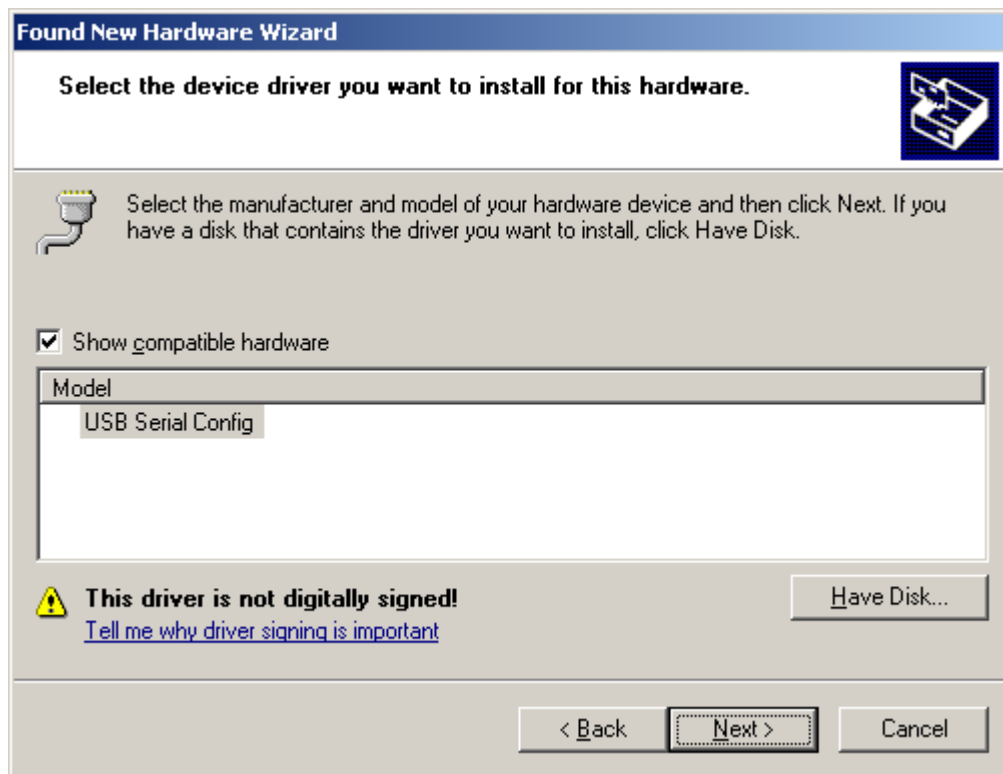


Press Have Disk button

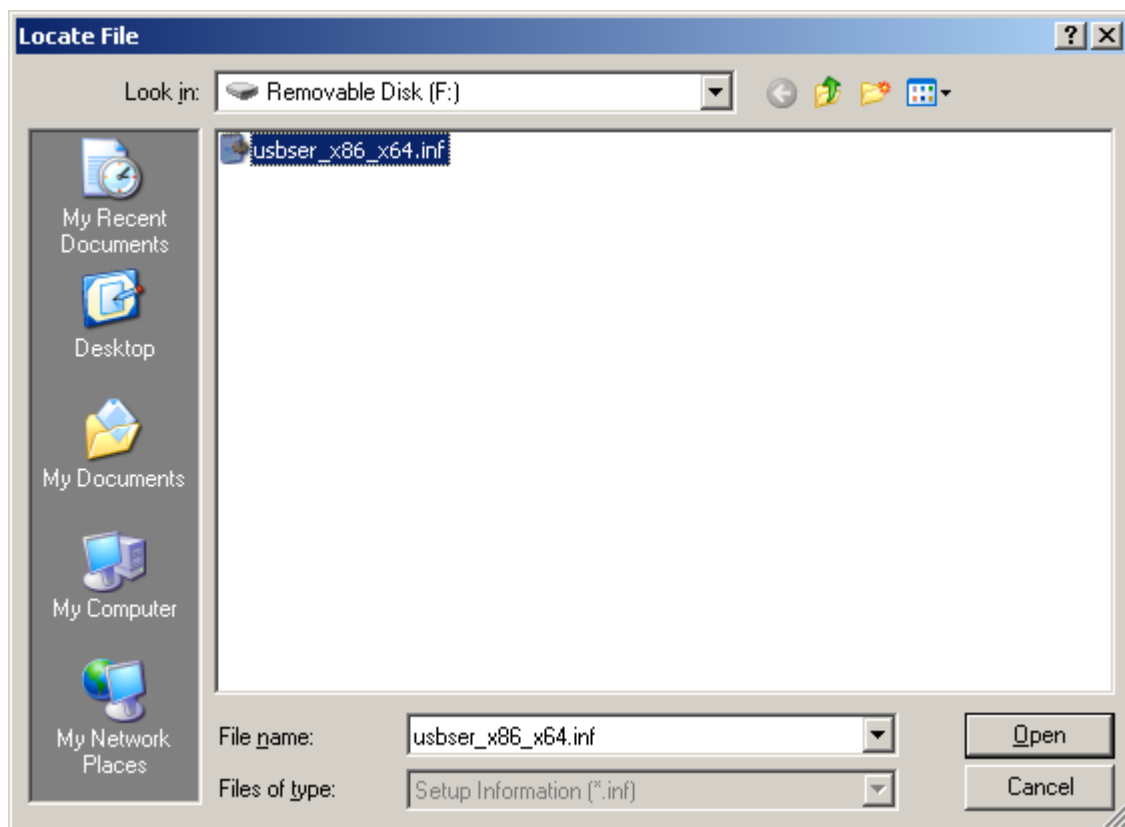


Select driver file:

Windows XP
Windows 7 x86 or x64


usbser.inf .
usbser_x86_x64.inf

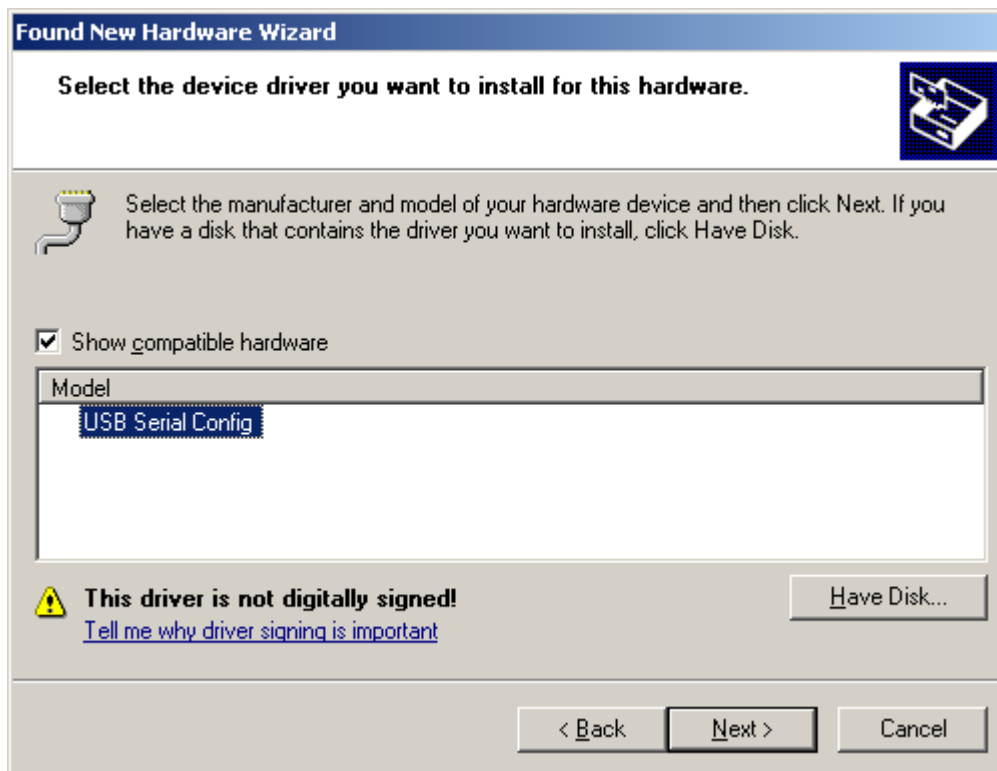

Press Next

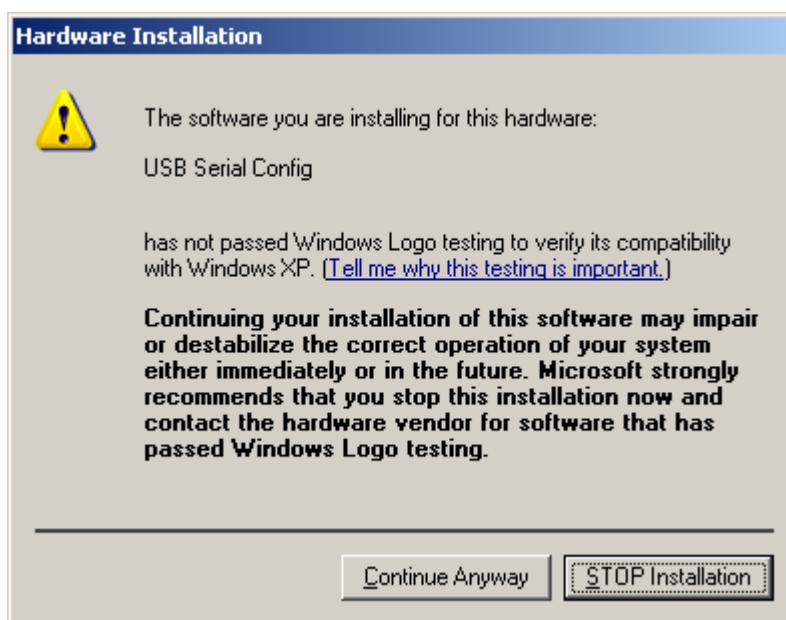

Press Continue Anyway

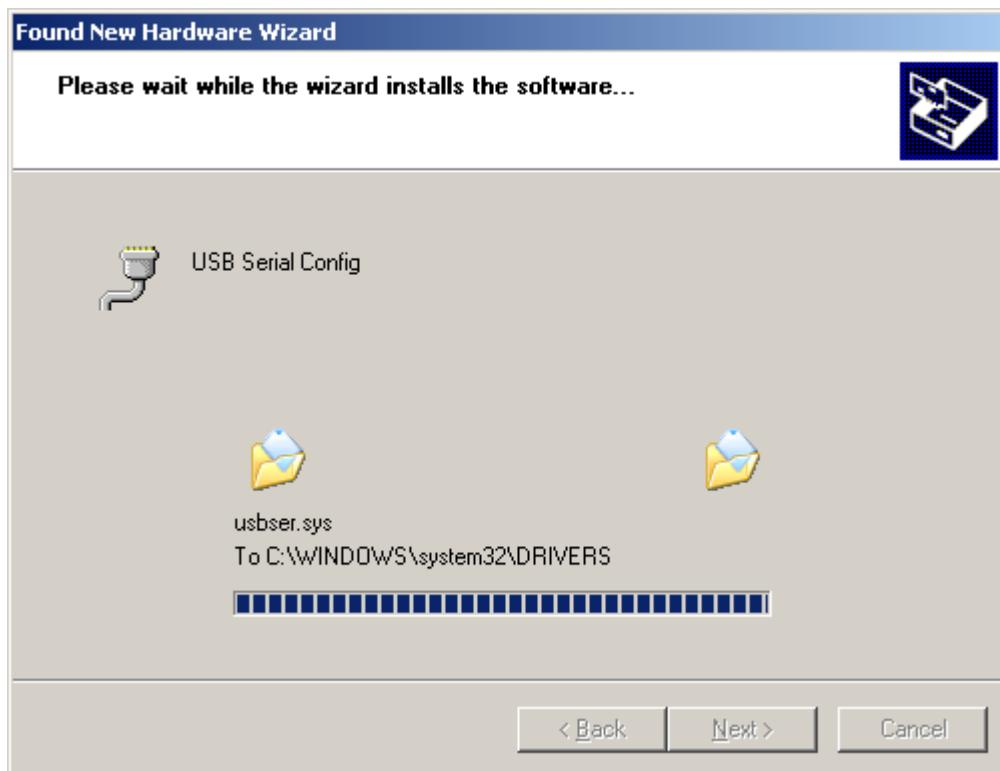

Wait while the driver will be installed


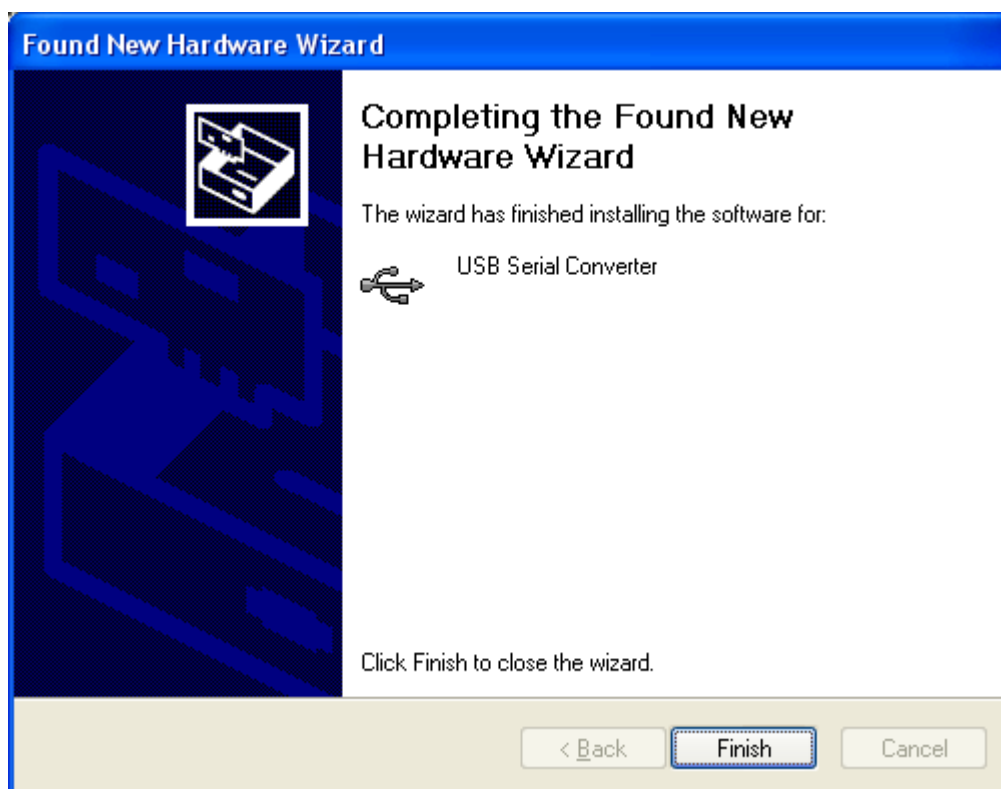


Fig. 8


Displayed Window (fig.8) means that your PC has found file necessary for driver's installation and successfully installed it. Press Finish Installation of USB Serial Config is finished.



Attention! After installation of USB driver, it is necessary to restart the PC.

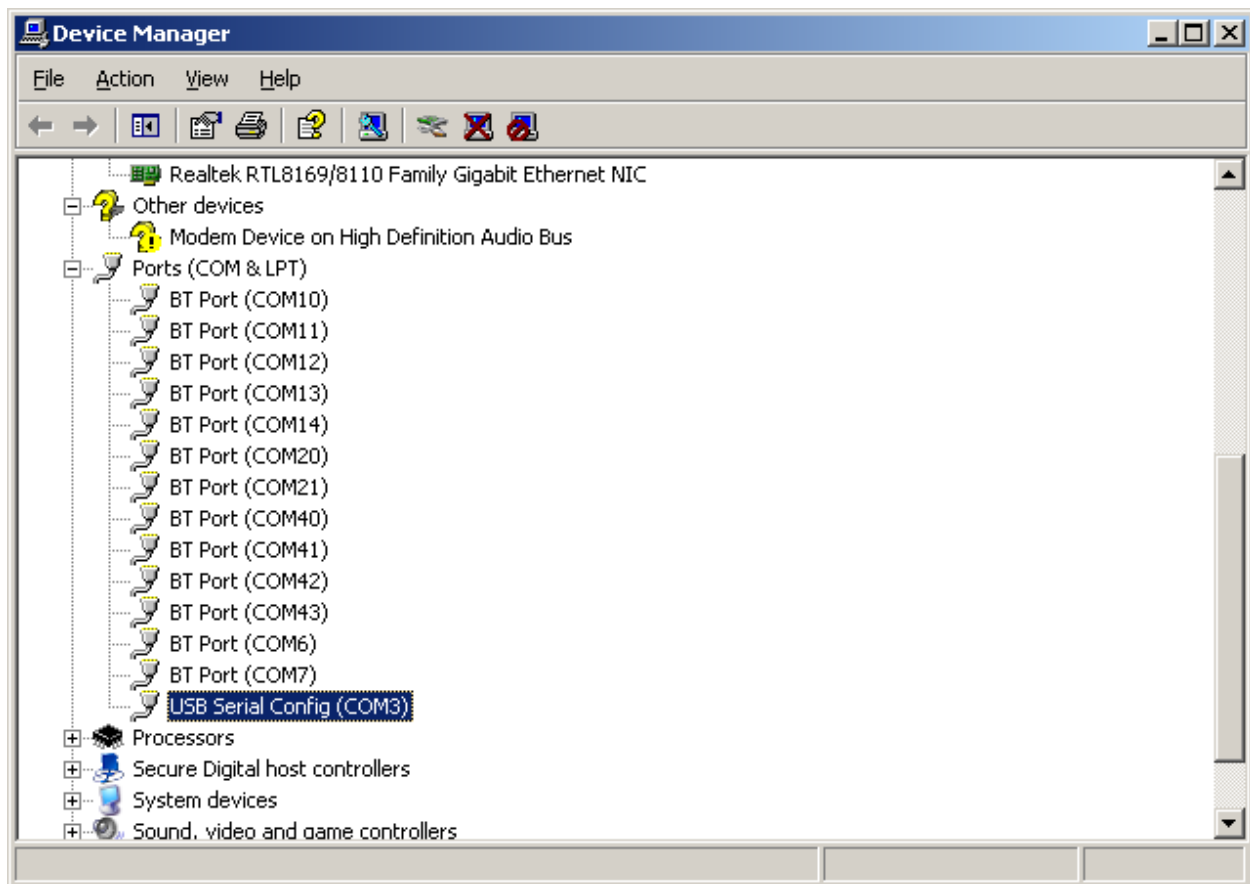

Open Device Manager window and in the row (COM&LPT) press + in order to see all PC COM ports. The row should show USB Serial Config (COMx). Drag mouse cursor on this row and right click on the menu item Properties. **You should see the window below with the note: „This device is working properly“**. This means that PC is successfully prepared for operation with configuration-testing application „SERA“.

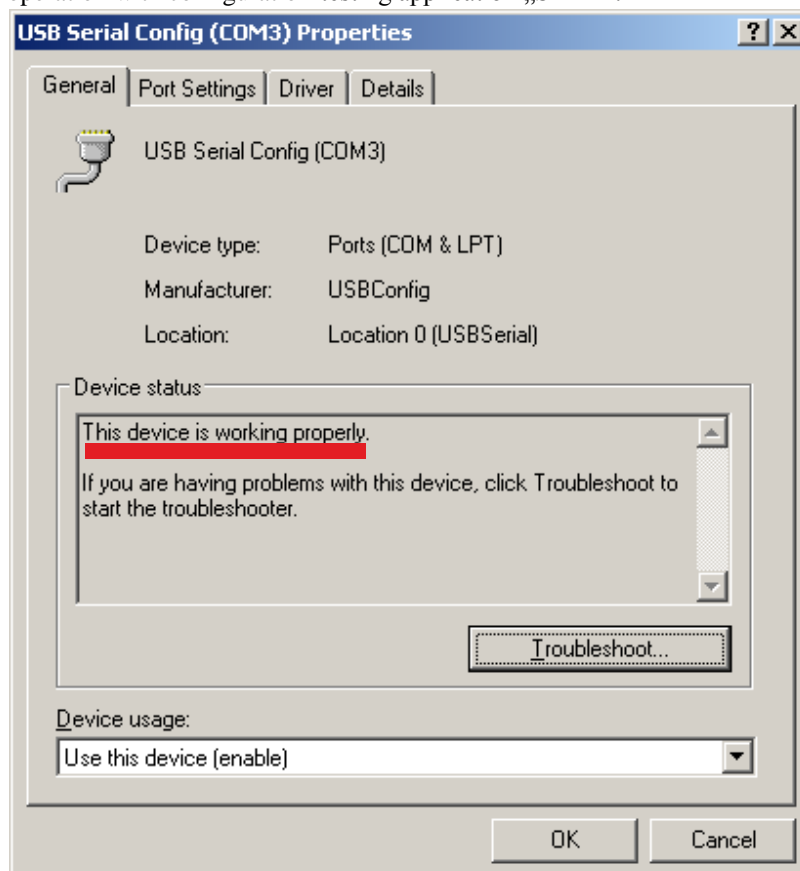

3. COM port number setting.

After installing drivers you should check what COM port number has been assigned to the USB module. To perform this task in Windows environment follow the instructions mentioned below.



Attention! The module should be connected to +12V and to a PC via USB interface. DO NOT power the module from PC power supply unit, because absence of common grounding between two PC power supply units may damage the module.

Open the Window [System Properties] (path: Start > Control Panel > System). [System Properties] Window (Fig. 9) is being displayed.

From the Window [System properties] select the tab [Hardware]. After selection of the tab [Hardware] Window (Fig. 9) will be displayed.

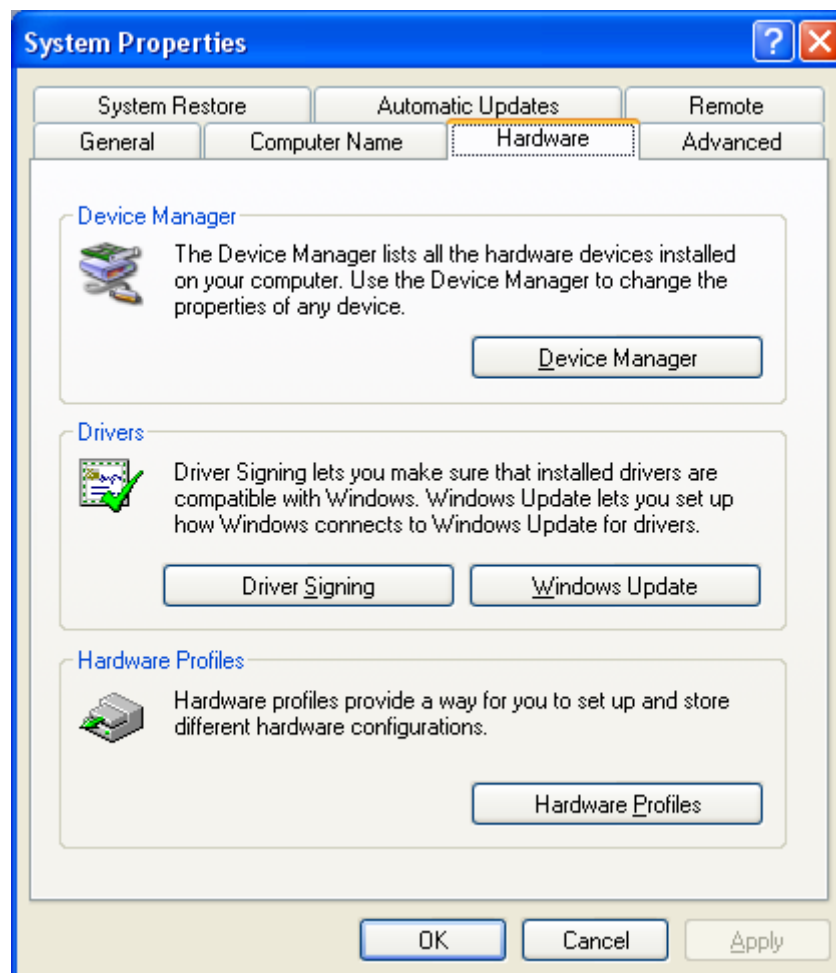


Fig. 9

Select [Device Manager] from the tab [Hardware]. Window (Fig. 10) will be displayed.

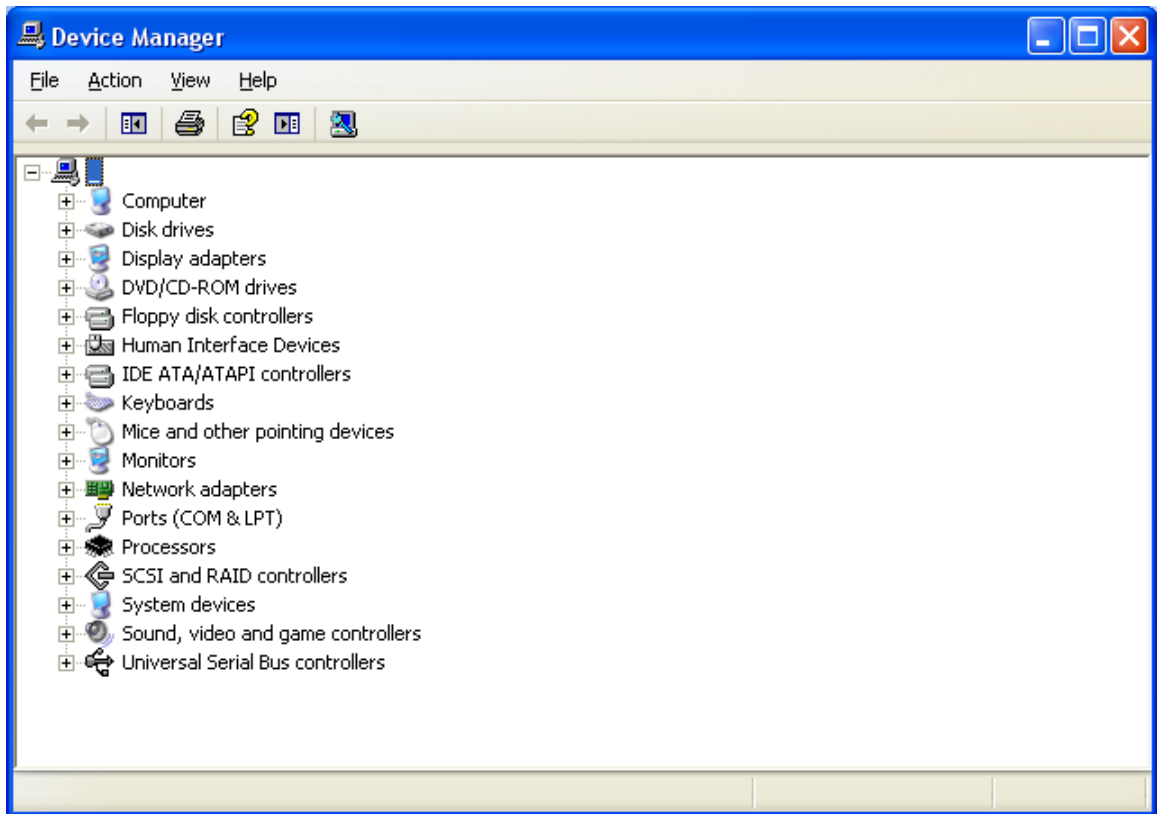


Fig. 10



Attention! If the module GTalarm is not powered with +12V and it is not connected to the PC via USB interface, menu [Ports (COM & LPT)] item [USB Serial Config (COMx)] will not be visible.

In [Device Manager] Window click „+“ symbol near [Ports (COM & LPT)] in order to scroll [Ports (COM & LPT)] menu. If the module is powered with +12V and it is connected to the PC via USB port, thus upon scrolling Ports (COM & LPT), Window (Fig. 11) will be displayed.

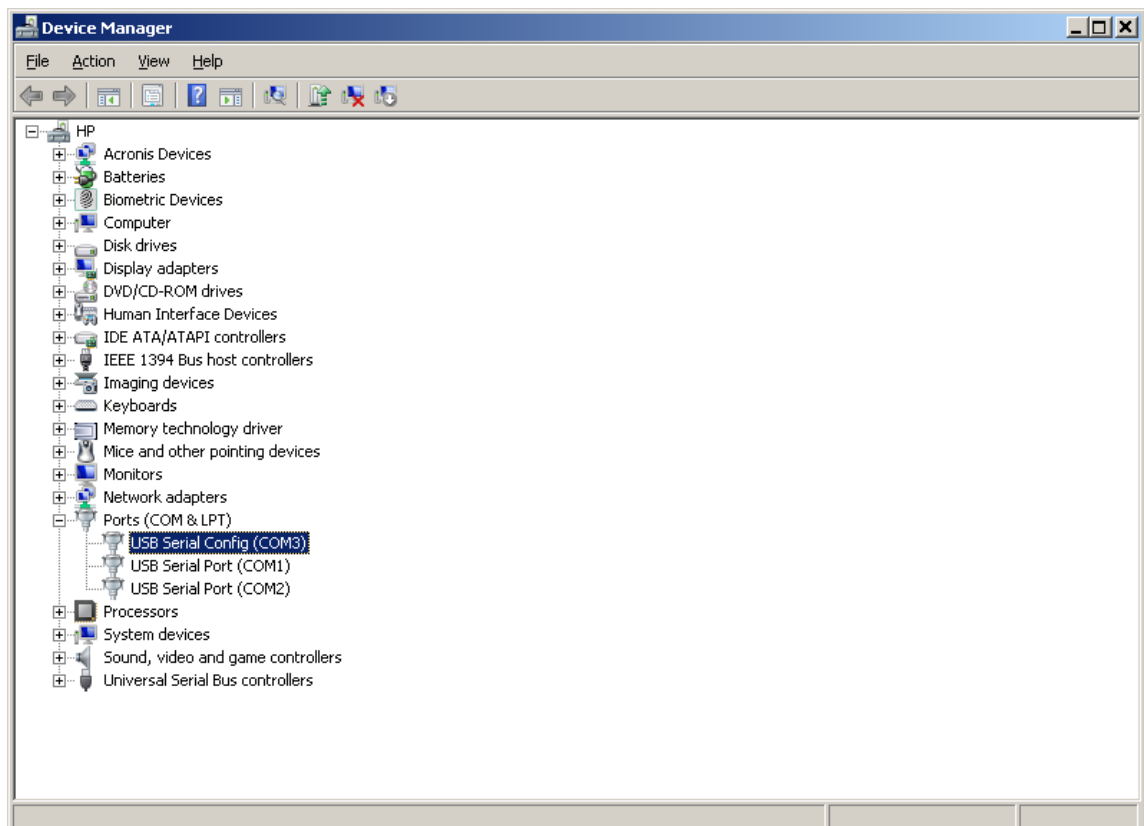



Fig. 11

From the displayed Window (Fig. 11) you must check what COM port is assigned to USB interface. [USB Serial Port (COM3)] is displayed in the example. This means that USB will be assigned to the third COM port. **Remember this COM port number and proceed with the clause Work with the software SERA**

4. Connection of the module to your PC

The module must be powered with (+12V >500mA) voltage, it should have inserted SIM card (with replenished account and removed **PIN CODE REQUEST**), connected GSM and GPS antennas and the module must be connected to the PC via programming cable.

Run SERA.exe

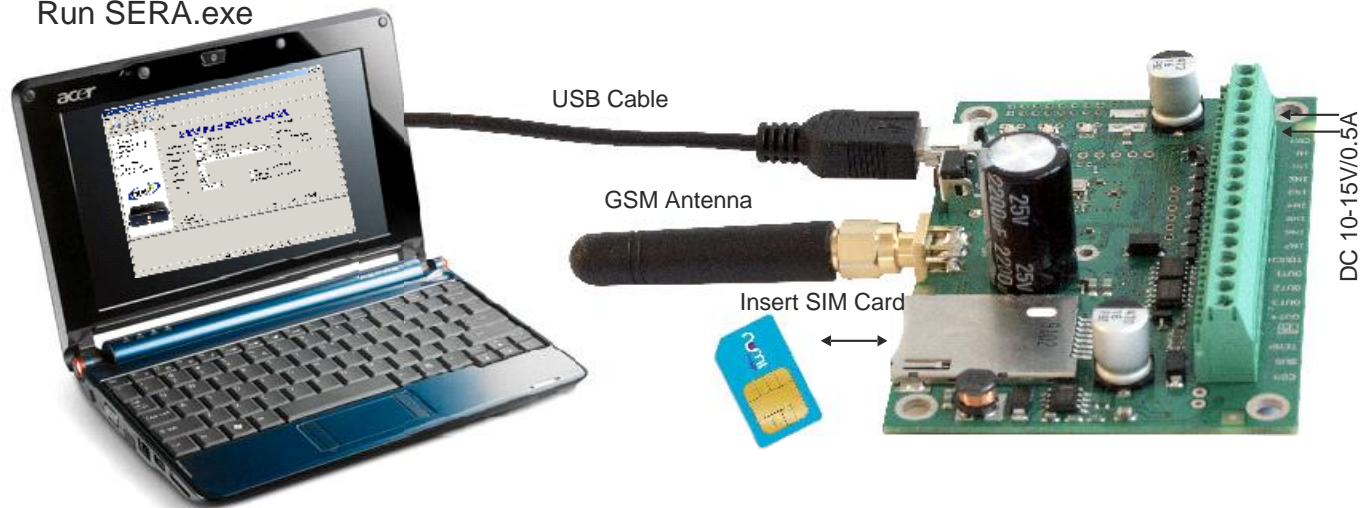

5. Work with the software SERA

Start the software SERA. Go to „Start“ > „All programs“ > „Topkodus“ > „SERA“ > „SERA“ or go to installation directory and click „SERA.exe“.

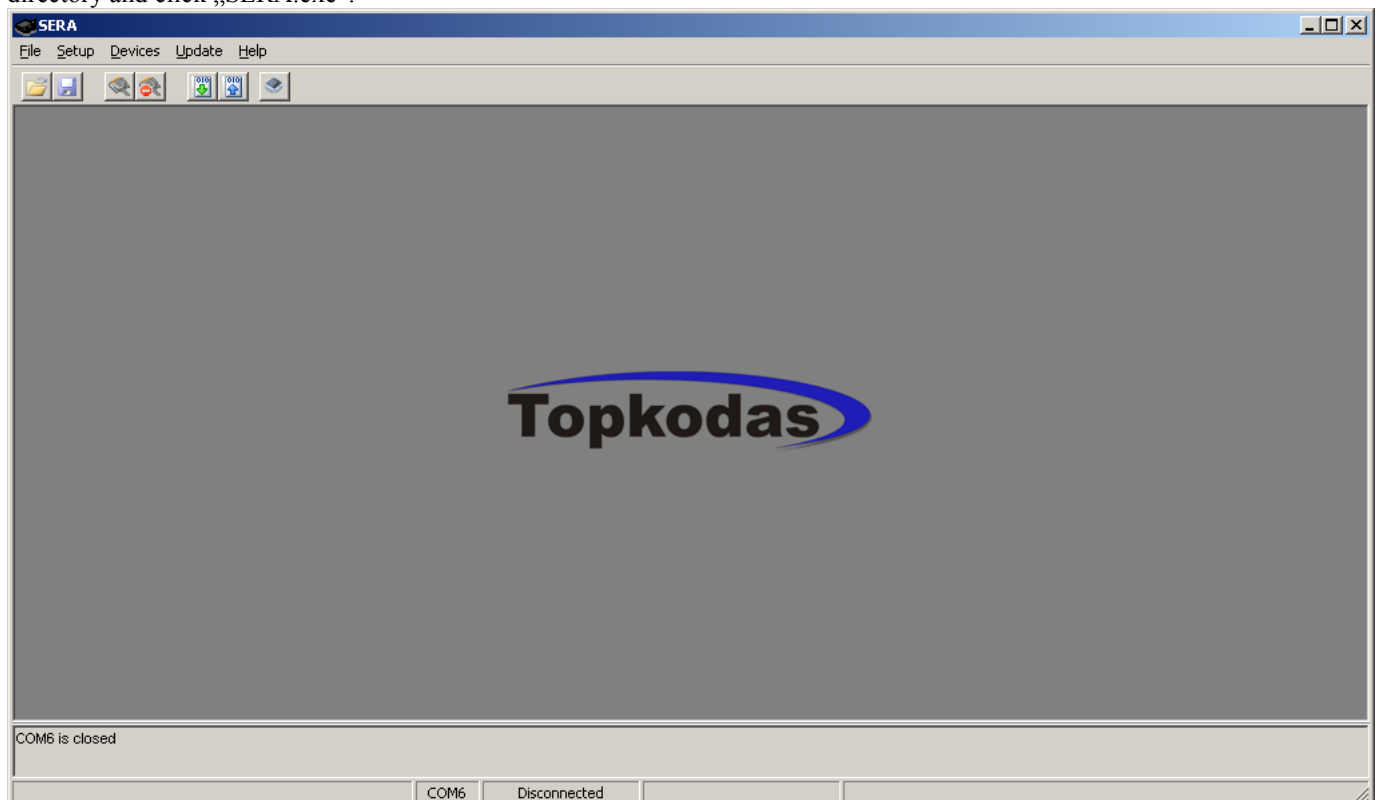


Fig. 12

If you are sure that the module is completely connected to PC and power supply, please go to Devices > GTCOM v1. (Fig. 13)

Fig. 13



After you make a selection, configuration window for GTCOM module (System Options) will be opened (Fig. 14)

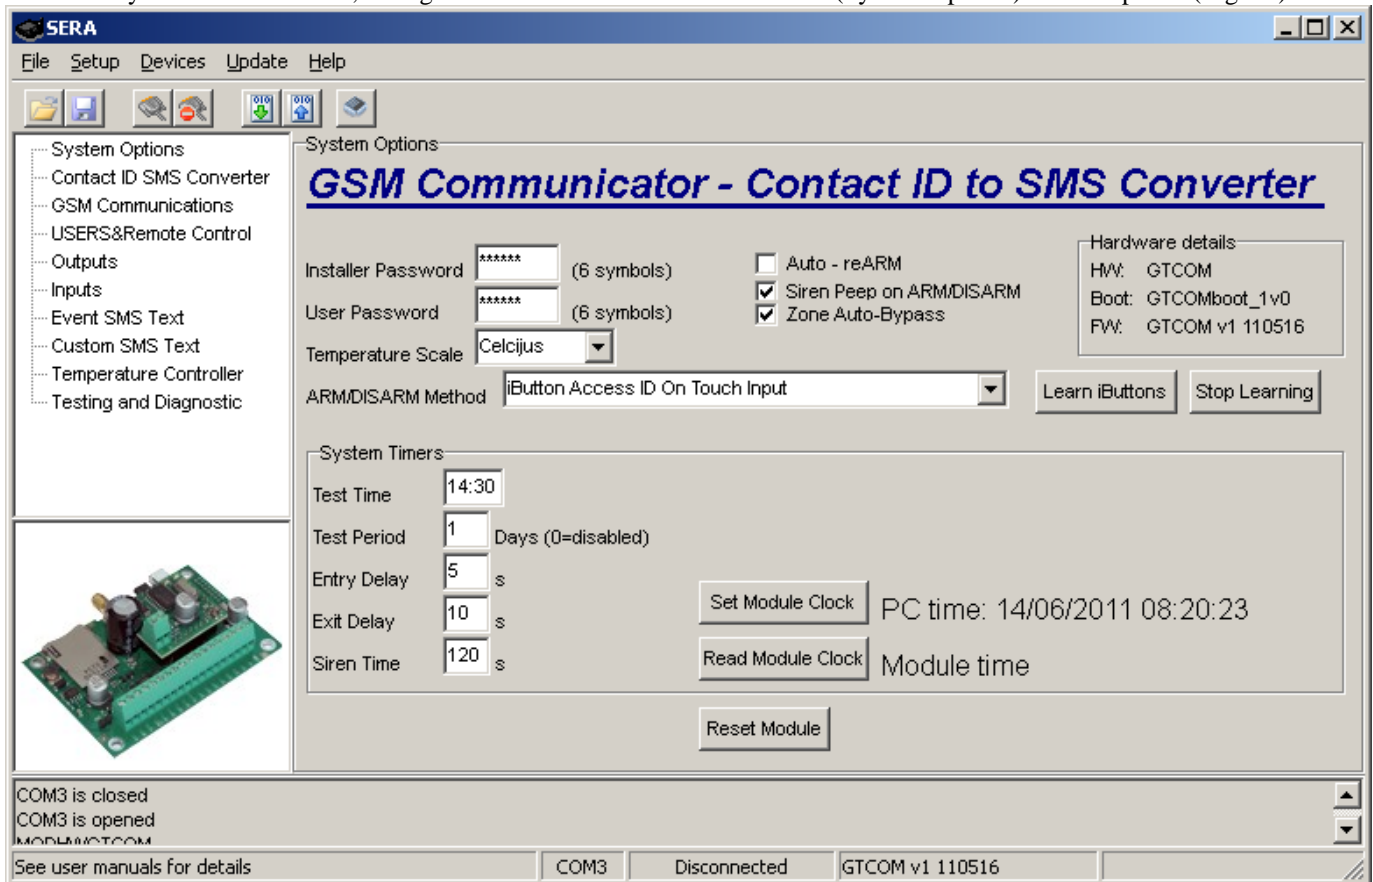


Fig. 14

Set the COM port to initialize. Go to [Setup] > [Serial Port...] (Fig. 15).




Fig. 15

Window [Serial Port Setup] should be displayed (Fig. 16). Scroll the list and select COM port, you saw in [Device Manager] window. In the example the port USB Serial Config (COM3) was assigned to the module. Therefore select from the list COM3 and press OK. .

Attention! If you do not know the COM port you have connected the module, please open Device Manager and read the chapter: 3 Selection of COM port



Fig. 16

Upon setting COM port, information of the module should be read out. Go to File > Read Device or press Read Configuration icon (Fig. 17)



Fig. 17 Read Configuration icon



Attention! Each time after configuring the module press [File] > [Write Device] or press Send Configuration icon (Fig. 18) thus the software SERA will write configuration changes into the module!

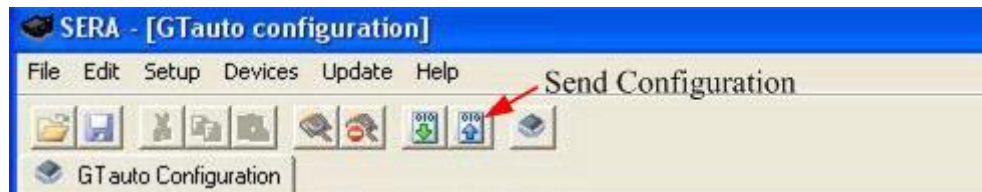


Fig. 18 Send Configuration icon.

5.1. Content of the module configuration

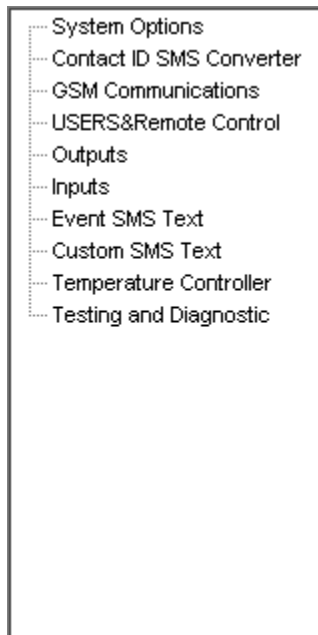


Fig. 19

Configuration content is available at the side of the screen. To open configuration window according to selected content menu, click preferred part of the content.

5.2. Main Window of the software SERA (System options)

Main Window (System Option) of the software SERA is displayed in Fig. (Fig. 20) This Window is displayed automatically when the GTCOM device is selected ([Devices] > GTCOM v1). It also may be selected from the content of the module.

The screenshot shows the 'System Options' window for the 'GSM Communicator - Contact ID to SMS Converter'. The window is titled 'System Options' and 'GSM Communicator - Contact ID to SMS Converter'. It contains several sections: 'Installer Password' and 'User Password' (both 6 symbols), 'Temperature Scale' (set to Celsius), 'ARM/DISARM Method' (set to iButton Access ID On Touch Input), 'Hardware details' (HW: GTCOM, Boot: GTCOMboot_1v0, FW: GTCOM v1 110516), 'System Timers' (Test Time: 14:30, Test Period: 1 Days, Entry Delay: 5 s, Exit Delay: 10 s, Siren Time: 120 s), and buttons for 'Set Module Clock', 'Read Module Clock', 'Reset Module', 'Learn iButtons', and 'Stop Learning'. The PC time is shown as 14/06/2011 08:20:52.

Fig. 20

Explanation of fields of Main Window:

Installer password	It is installer password comprised of 6 symbols, when the module is being configured via SMS messages. See INST codes table.
User password	It is installer password comprised of 6 symbols, each time the module is being controlled via SMS messages. See USER code table.
Temperature	It is temperature scale. Two scale types are possible, one of which may be selected after scrolling menu near the note "Temperature": <ul style="list-style-type: none"> • Celsius – temperature indications according to Celsius scale. • Fahrenheit – temperature indications according to Fahrenheit scale.
ARM/DISARM method (Touch input)	When connecting the module to the central lock, it is necessary to set signals the module will enter ARM/DISARM modes. 5 versions is possible: <ul style="list-style-type: none"> • Disable – programmable block of LOCK and UNLOCK inputs. The module will show no reaction towards signals in LOCK and UNLOCK inputs. • >500ms Positive Pulse On Touch input - If in input „Touch“ >500ms the impulse will appear into +V, the security system's state will be changed from ARM to DISARM or wise versa. • >500ms Negative Pulse On Touch input - If in input „Touch“ >500ms the impulse will appear into -V, the security

	<p>system's state will be changed from ARM to DISARM or vice versa.</p> <ul style="list-style-type: none"> • Positive Level ARM/Negative Level DISARM On Touch input. When in input „Touch“ is a positive level +V, the state of the module will be ARM. When negative level - V, the state of the module will be DISARM. • Positive Level ARM/Negative Level DISARM On Touch input. When in input „Touch“ is a positive level -V, the state of the module will be ARM. When negative level - V, the state of the module will be DISARM. • iButton Access ID On Touch Input - uses Touch input. System state ARM/DISARM is changed by using Dallas/Maxim iButton key. (iButton DS1990A - 64 Bit ID).
Learn iButtons	After pressing this button, the module will enter iButton keys associating mode. In this mode the module will enter into memory all touched keys, which will be able to control the module.
Stop Learning (button)	Upon pressing the button, the mode for new iButton keys learning will be stopped, and at the same time the program will automatically read the codes of newly learned keys. To review the codes of these keys refer menu USERS&Remote Control, see 5.5 chapter.
Test time	The time period since which informational SMS text message will be sent. Attention! In order to timely send the periodical test message, it is necessary to adjust settings of internal clock of the module.
Test Period	Test sending periodicity in 24 hours
Entry Delay	Input time in seconds. The system starts calculating this time period after Delay type zone breaking. If during that time the security system will not be disarmed, The module will activate alarm state, i.e siren will be switch on and SMS will be send about alarmed zones.
Entry Delay	It is insensibility time (seconds) of the module into Delay and Interior type inputs before the module enters to ARM mode. This means that during calculation of this time period, the module will not activate alarm even if inputs will be activated.
Siren Time	This time value specifies how long the Siren of security system will be active after occurrence of alarm. Time period should be set in seconds from 1 sec to 999 sec.
Siren Peep on ARM/DISARM	When the function is active and the security system is turned into ARM state, siren will beep once, when turning into DISARM state - it will beep twice.
Auto re-ARM	Automated activation of the system, if a door has not been closed after DISARMin the system.
Temperature	It is temperature scale. Two scale types are possible, one of which may be selected after scrolling menu near the note "Temperature": <ul style="list-style-type: none"> • Celsius – temperature indications according to Celsius scale. • Fahrenheit – temperature indications according to Fahrenheit scale.
Hardware details	This is info about your GTCOM module:

	<ul style="list-style-type: none"> • HW – hardware version of the module. • Boot – start up program version (BOOT) This part of the software is able to update Firmware SW. • FW – Firmware version of the module.
Set Module Clock (button)	<p>Sets module's clock according to PC time.</p> <p><i>Attention! Upon failure of power supply voltage, the module's clock should be reset</i></p>
Read Module Clock (button)	Sets the module's RTC Real Time Clock
Reset Module (button)	This function operates as programmable function of the module "RESET". This function operates similarly as actual built-in RESET button. This function will not operate, in the event USB Serial Port is not open or FW the module is not functioning properly.

5.3. Window Communicator Contact ID Codes to SMS Converter

Select **Contact ID SMS Converter** if you want to open **Communicator Contact ID Codes to SMS Converter** window. The window Fig. 21 will be displayed. In this window you will see four tables, which describe Contact ID codes. According to these descriptions, the module will convert Contact ID codes into SMS text.

Communicator Contact ID Codes to SMS Converter

CID Message Format Q/XYZ/GG/CCC (hexadecimal)

Event Code XYZ

ID	XYZ	Event SMS text	Type	QID	SMS1	DIAL
1	100	Medical	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	101	Personal Emergency	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	102	Fail to report in	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	110	Fire	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
5	111	Smoke	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
6	112	Combustion	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
7	113	Water flow	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8	114	Heat	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
9	120	Panic	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
10	121	Duress	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
11	122	Silent	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
12	123	Audible	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
13	130	Burglary	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
14	131	Perimeter	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
15	132	Interior	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
16	133	24 Hour Safe	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
17	134	Entry/Exit	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
18	135	Day/Night	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
19	136	Outdoor	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Event Qualifier Q

QID	Q	Qualifier SMS text
1	1	Open
1	3	Close
1	6	Status report
2	1	Alarm
2	3	Restore
2	6	Status report
3	1	New Event
3	3	Restore

User/Zone Number CCC

CCC	User/Zone Name	SMS text	Type
000			USER
001	User 001		USER
002	User 002		USER
003	User 003		USER
004	User 004		USER
005	User 005		USER
006	User 006		USER
007	User 007		USER
008	User 008		USER
009	User 009		USER
010	User 010		USER
011	User 011		USER
012	User 012		USER
013	User 013		USER
014	User 014		USER
015	User 015		USER
000			ZONE
001	Zone 001		ZONE
002	Zone 002		ZONE
003	Zone 003		ZONE

Group or Partition GG

GG	Partition SMS text
00	
01	Partition/Group 01
02	Partition/Group 02
03	Partition/Group 03
04	Partition/Group 04
05	Partition/Group 05
06	Partition/Group 06
07	Partition/Group 07
08	Partition/Group 08

Fig. 21

By using these tables, GTCOM module will generate a SMS message, understandable for a user, according to CONTACT ID code Q/XYZ/GG/CCC. For example:

Received Contact ID code 1/100/01/003 Q=1;XYZ=100; GG=01;CCC=003

Whereas Q=1 and XYZ=100 in the table XYZ the code 100 has assigned QID=2, the text from the Q table will be taken (Alarm) because combination is QID= 2 and Q=1 .

After the text from XYZ GG and CCC tables is being inserted.

ID	XYZ	Event SMS text	Type	QID	SMS1	DIAL1	SMS2	DIAL2	SMSx	DIALx
1	100	Medical	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	101	Personal Emergency	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	102	Fail to report in	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	110	Fire	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Fig. 22

ID	XYZ	Event SMS text	Type	QID	SMS1	DIAL1	SMS2	DIAL2	SMSx	DIALx
1	100	Medical	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	101	Personal Emergency	NONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	102	Fail to report in	USER	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	110	Fire	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

ID	XYZ	Event SMS text	Type	QID	SMS1	DIAL1	SMS2	DIAL2	SMSx	DIALx
1	100	Medical	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	101	Personal Emergency	ZONE	NONE	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	102	Fail to report in	ZONE	1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	110	Fire	ZONE	2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

The main table of event codes Fig. 22 is **XYZ**. In this table up to 146 events may be described. This practically covers the whole CONTACT ID codes standard. Therefore a user will be able to receive all messages from the security control panel in understandable text.

In the column "Type" select the text from CCC table to be assigned to ZONE/USER/NONE.

In the column QID select the text from Q table to be assigned Fig. 23 according to QID identifier. For example, if QID=2 is selected, the SMS message will use the text (Alarm/Restore/Status Report) depending on what Q code will be accepted (1/3/6).

In SMS and DIAL columns select which users to be informed about the events. For example: SMS1 - a user with the first telephone number will be informed. SMSx - the rest 3-16 users.

Event Qualifier Q

	QID	Q	Qualifier SMS text
▶	1	1	Open
	1	3	Close
	1	6	Status report
	2	1	Alarm
	2	3	Restore
	2	6	Status report
	3	1	New Event
	3	3	Restore

Fig. 23

Event type is described in **Q table**Fig. 23. According to the standard Q codes 1 and 3 may have different interpretation, e.g.: 1 - stands for Alarm or Open, and 3 - for Restore and Close, therefore in a Q table all versions of interpretation are used. QID identifier, which is being selected in QID column of XYZ tableFig. 22, defines what text will be associate with every event.

Group or Partition GG

	GG	Partition SMS text
▶	00	
	01	Partition/Group 01
	02	Partition/Group 02
	03	Partition/Group 03
	04	Partition/Group 04
	05	Partition/Group 05
	06	Partition/Group 06
	07	Partition/Group 07
	08	Partition/Group 08

Subgroup names are described in **GG table**, e.g.: House, garage etc.

User/Zone Number CCC

	CCC	User/Zone Name SMS text	Type
▶	012	User 012	USER
	013	User 013	USER
	014	User 014	USER
	015	User 015	USER
	000		ZONE
	001	Zone 001	ZONE
	002	Zone 002	ZONE
	003	Zone 003	ZONE

	CCC	User/Zone Name SMS text	Type
▶	012	User 012	USER
	013	User 013	USER
	014	User 014	ZONE
	015	User 015	USER
	000		ZONE
	001	Zone 001	ZONE
	002	Zone 002	ZONE
	003	Zone 003	ZONE

User names and zone names (Zn1 window, door...) are described in **CCC table**. Up to 151 users and zones may be described. In the column Type one may select what will be described ZONE or USER.

5.4. Window [GSM communication options]

In order to open Window [GSM SMS and DIAL communication options] it is necessary to select „GSM Communication“ clause Fig. 19. The Window Fig. 25 including user table whom GSM SMS messages are being sent and calls are being made. User number up to 16 Double click on the selected line will show selected user window Fig. 26to set what events should be sent to the specified number.

User numbers should be entered with international code. Near the telephone number of each user, check boxes which events will be sent to that user.

ID	User Phone SMS and DIAL	IN1 SMS	IN2 SMS	IN3 SMS	IN4 SMS	IN5 SMS	IN6 SMS	IN7 SMS	Test SMS	ARM SMS	DISARM SMS	BAT SMS
1	+1405727278	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16	+	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Fig. 24
Fig. 25

Fig. 26

Explanation of fields of [GSM communication options] Window:

ID	ID of the user to whom send SMS and make a call.
-----------	--

User Phone SMS and DIAL	This column includes user numbers to whom GSM SMS messages will be sent and short calls will be made. User number should be entered with international code.
Sending SMS (Alarm/Restore)	The events with check boxes will be send to selected users via SMS
Dialling to USER (Alarm/Restore)	A user will be notified about these events (the check bow should be checked) by making him a short call
SMS error limit	SMS repetition limit in a case of failure to send SMS.
Limit of dialling	It is a figure, which specifies how many times to call to a user's telephone number, in the event of alarm or if a user does not cancel call of the module. If a user after 15 sec will reject a call, the module will stop making calls till another event.

5.5. Remote Control by Dialling (Remote Control by Dialling)

To open Window [Remote Control by Dialling], it is necessary to select [GSM Remote Control]. A window Fig. 27 will be displayed including users table. These users would be able to control the module by dialling. The module will identify caller ID and if this ID will be available in the table, the module will perform selected action. It is possible to select few actions for one number, however some of these actions may disturb each other. In such case the microphone will not be able to turn on, because when sending SMS message, the module will automatically terminate the call.

The number of users - up to 400

Remote Control Users table									
	ID	User Phone	iButton	Out1	Out2	Out3	Out4	Arm/Disarm	MIC
1	1	+140524248924	3C0005F00000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2	2	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	3	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	4	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	5	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	6	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	7	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8	8	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9	9	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10	10	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11	11	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12	12	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13	13	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14	14	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15	15	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16	16	+	000000000000	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Fig. 27

Explanation of fields of [Remote Control by Dialling]:

ID	ID number of a user who is able to control the module by dialling up to 400.
User Phone	Telephone numbers of users who will be able to control the module by dialling should be entered in this column. User number should be entered with international code.
iButton	iButton Maxim iButton key DS1990A - 64 Bit ID code. The code might be entered manually or automatically registered, upon entering the module into keys learning mode. In order to delete the code enter 000000000000
OUT1, OUT2, OUT3, OUT4	Where the check boxes are checked, these inputs will be switched, if a user will call from this number. Preferred output may be assigned to each user's number. Thus different users are able to control different objects.
ARM/DISARM command.	If this check box is checked, a user will be able to ARM/DISARM the security system by dialling.
MIC	If this check box is checked, a user will be able to activate microphone and to switch on voice listening.

5.6. Window [Outputs]

In order to open Window [Outputs], it is necessary to select [Outputs] option.

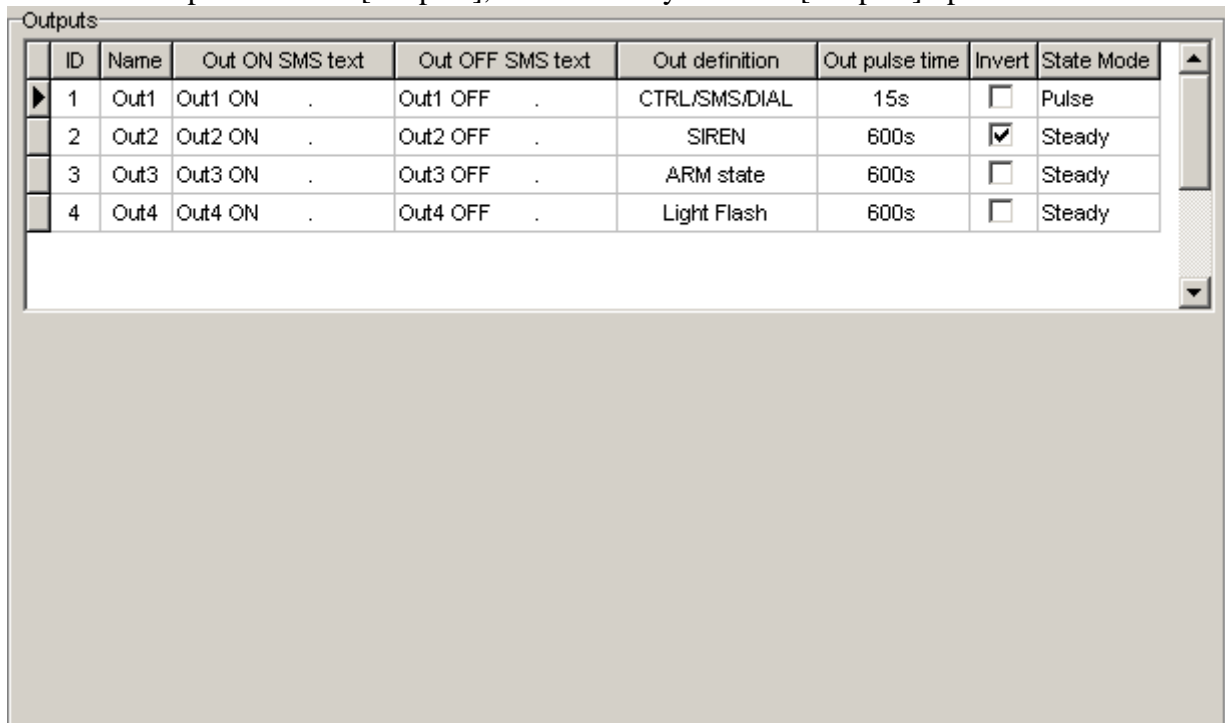


Fig. 28

ID	Name	Out ON SMS text	Out OFF SMS text	Out definition	Out pulse time	Invert	State Mode
1	Out1	Out1 ON .	Out1 OFF .	CTRL/SMS/DIAL	15s	<input type="checkbox"/>	Pulse
2	Out2	Out2 ON .	Out2 OFF .	CTRL/SMS/DIAL	600s	<input checked="" type="checkbox"/>	Steady
3	Out3	Out3 ON .	Out3 OFF .	SIREN	600s	<input type="checkbox"/>	Steady
4	Out4	Out4 ON .	Out4 OFF .	BUZZER	600s	<input type="checkbox"/>	Steady
				ARM state			
				Inputs OK			
				Light Flash			

Fig. 29

ID	Name	Out ON SMS text	Out OFF SMS text	Out definition	Out pulse time	Invert	State Mode
1	Out1	Out1 ON .	Out1 OFF .	CTRL/SMS/DIAL	15s	<input type="checkbox"/>	Pulse
2	Out2	Out2 ON .	Out2 OFF .	SIREN	600s	<input checked="" type="checkbox"/>	Steady
3	Out3	Out3 ON .	Out3 OFF .	ARM state	600s	<input type="checkbox"/>	Pulse
4	Out4	Out4 ON .	Out4 OFF .	Light Flash	600s	<input type="checkbox"/>	Steady

Fig. 30

Explanation of fields of [Outputs] Window:

ID	Output ID number
Name	Output name
Out ON text	It is a text, which will be sent to a user after activation of output by the module. This text may be changed.
Out OFF text	It is a text, which will be sent to a user after deactivation of output by the module. This text may be changed.
Out definition	Output activity algorithm may be selected from scrolled menu, see Fig. 29:

	<ul style="list-style-type: none"> • CTRL/SMS/DIAL – output will be possible to control via SMS message, short call or commutation via selected input. This algorithm may be used for ignition blocking, for gate control or for remoter starting of a car etc. • SIREN – output used for connection of siren. Used for generating of voice signal in the event of alarm. • BUZER – sound signalling device. In the event of zone alarm - beeps continuously. When security system starts calculating exit delay, the user is able to hear short, repetitive sound signals. When 10 seconds are left till the begging of activation, signals are being repeated each 0.5 seconds. If after expiry of the delay time, all zones remain unalarmed, the system turns into ARM state along with beep sound to confirm the action. • ARM State – state of alarm system ARM/DISARM. May be used for light indication. When the output is set to operate in pulse mode, this feature may be used to close car windows or sunroof on arming. Impulse time should be set 20-30 seconds. On arming the output will generate signal to close windows. • Inputs OK - if any of zones is disturbed, the output will be activated. This feature is usually used for indication whether all zones are in order. • Light Flash – used for connection of light signal. Upon alarm of the security system the light starts blinking. Lights will also blink when arming/disarming the security system. This feature may be applied to connect car direction signals.
Out pulse time	It is time in seconds, which indicates duration of impulse, when Pulse type is being selected in the column [State Mode]
Invert	Option to invert the output. If the check box is to be checked, the output will work as inverted.
State mode	<p>Output commutation type, see Fig. 30.</p> <ul style="list-style-type: none"> • Pulse – the output will work in pulse mode. Pulse time (seconds) should be set in [Out pulse time] column. • Steady – output will work on the steady level till the next commutation.

5.7. Window [Inputs]

In order to open **Inputs window**, it is necessary to select **Input**. All input parameters are being described in this window. Double click on the selected line in order to open input settings window see Fig. 35

In	Input Name	Alarm text	Restore text	Alarm	Restore	Input Type	Input Def.	Input speed	Repeat time	Action
▶ 1	Input 1	Door Alarm	Door Closed	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	delay	200ms	1s	Disable
2	Input 2	PIR1 Alarm	PIR1 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	interior	200ms	1s	Disable
3	Input 3	PIR2 Alarm	PIR2 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	instant	200ms	1s	Disable
4	Input 4	Glass Break	Glass Break	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	instant	200ms	1s	Disable
5	Input 5	Fire Alarm	Fire Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	fire	200ms	1s	Disable
6	Input 6	Panic Button	Panic Button	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	silent	200ms	1s	Disable
7	Input 7	Tamper Alarm	Tamper Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	24 hours	200ms	1s	Disable
8	Battery	Low Batery	Batery Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	NC	silent	65000ms	6000s	Disable

Fig. 31

In	Input Name	Alarm text	Restore text	Alarm	Restore	Input Type	Input Def.	Input speed	Repeat time	Action
▶ 1	Input 1	Door Alarm	Door Closed	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	delay	200ms	1s	Disable
2	Input 2	PIR1 Alarm	PIR1 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	NO	interior	200ms	1s	Disable
3	Input 3	PIR2 Alarm	PIR2 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	NC	instant	200ms	1s	Disable
4	Input 4	Glass Break	Glass Break	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	instant	200ms	1s	Disable
5	Input 5	Fire Alarm	Fire Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	fire	200ms	1s	Disable
6	Input 6	Panic Button	Panic Button	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	silent	200ms	1s	Disable
7	Input 7	Tamper Alarm	Tamper Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	24 hours	200ms	1s	Disable
8	Battery	Low Batery	Batery Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	NC	silent	65000ms	6000s	Disable

Fig. 32

In	Input Name	Alarm text	Restore text	Alarm	Restore	Input Type	Input Def.	Input speed	Repeat time	Action
1	Input 1	Door Alarm	Door Closed	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	delay	200ms	1s	Disable
▶ 2	Input 2	PIR1 Alarm	PIR1 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	interior	200ms	1s	Disable
3	Input 3	PIR2 Alarm	PIR2 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	delay	200ms	1s	Disable
4	Input 4	Glass Break	Glass Break	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	interior	200ms	1s	Disable
5	Input 5	Fire Alarm	Fire Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	instant	200ms	1s	Disable
6	Input 6	Panic Button	Panic Button	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	24 hours	200ms	1s	Disable
7	Input 7	Tamper Alarm	Tamper Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	silent	200ms	1s	Disable
8	Battery	Low Batery	Batery Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	NC	fire	65000ms	6000s	Disable
							interior stay			
							instant stay			

Fig. 33

In	Input Name	Alarm text	Restore text	Alarm	Restore	Input Type	Input Def.	Input speed	Repeat time	Action
▶ 1	Input 1	Door Alarm	Door Closed	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	delay	200ms	1s	Disable
2	Input 2	PIR1 Alarm	PIR1 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	interior	200ms	1s	Disable
3	Input 3	PIR2 Alarm	PIR2 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	instant	200ms	1s	OUT1
4	Input 4	Glass Break	Glass Break	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	instant	200ms	1s	OUT2
5	Input 5	Fire Alarm	Fire Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	fire	200ms	1s	OUT3
6	Input 6	Panic Button	Panic Button	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	silent	200ms	1s	OUT4
7	Input 7	Tamper Alarm	Tamper Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	24 hours	200ms	1s	Disable
8	Battery	Low Batery	Batery Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	NC	silent	65000ms	6000s	Disable

Fig. 34

Fig. 35

Explanation of fields of [Inputs] window:

In	Input number
Input Name	Input name
Alarm text	It is the text, which will be received by a user after alarm response of appropriate sensor. This text may be changed.
Restore text	It is the text, which will be received by a user after restore of appropriate sensor. This text may be changed.
Alarm	If the box is checked it means that the module will react towards alarm response of appropriate sensor. If the box is not checked the module will not react towards alarm of the present input.
Restore	If the check box is checked, it means that the module will react towards restore of appropriate sensor after alarm response. If the check box is not checked the module will not react towards restore of the present input.
Input Name	Input type you may select after scrolling menu: <ul style="list-style-type: none"> • NC – normally closed contact; • NO – normally open contact; • EOL - normally closed contact with 1 resistor
Input Def.	Input operation type you may select after scrolling menu: <ul style="list-style-type: none"> • Delay – Entry zone. Set "Entry delay" and "Exit Delay" are applied for this zone. Such type zones are used for connection of door sensor. • Interior – disturbance of this zone will not be responded, if alarm of "Delay" type zone occurred and "Entry Delay" or "Exit Delay" time still have not expired. Such type zones may be used for connection of motion sensor in front of the door. The input will be activated immediately if the door has not been open before. • Instant – Instant zone. Upon disturbance of this zone, the system will immediately activate burglary alarm. If the security system was ARM'ed. • 24 hours - Upon disturbance of this zone, the system will activate burglary alarm not depending whether the security system is ARM or DISARM. The applications of this type

	<p>zones are safes, storehouses, tampers of the sensors.</p> <ul style="list-style-type: none"> • Silent - silent zone is always active not depending on whether the security system is ARM or DISARM. Upon disturbance of this zone, SMS messages are being generated but the siren will not be activated. These zones may be applied for voltage, temperature control, AC mains failure control and for alarm of silent panic. • Fire - this zone is always active not depending on whether the security system is ARM or DISARM. The zone generates a special siren signal with interruptions. The zone is applied for smoke sensors and for fire alarm.
Input speed	It is the time in milliseconds, which indicates the shortest signal for reaction of the module. If signal is shorter than indicated, the module will ignore it.
Repeat time	The time period in seconds, during this time repeatable zone events are ignored.
Zone Action	Changing of selected output state upon alarm or restore.
Battery (Fig. 36)	<p>In8 Low Battery parameters</p> <ul style="list-style-type: none"> • Alarm voltage – voltage the module is connected to; when this voltage is reached, the 8 zone will be alarmed. • Restore voltage – voltage the module is connected to; when this voltage is reached, the 8 zone will be restored. • Calibration – coefficient, if changed voltage indications might be calibrated.

Inputs

In	Input Name	Alarm text	Restore text	Alarm	Restore	Input Type	Input Def.	Input speed	Repeat time	Action
1	Input 1	Door Alarm	Door Closed	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	delay	200ms	1s	Disable
2	Input 2	PIR1 Alarm	PIR1 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	interior	200ms	1s	Disable
3	Input 3	PIR2 Alarm	PIR2 Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	instant	200ms	1s	Disable
4	Input 4	Glass Break	Glass Break	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	instant	200ms	1s	Disable
5	Input 5	Fire Alarm	Fire Restore	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	fire	200ms	1s	Disable
6	Input 6	Panic Button	Panic Button	<input checked="" type="checkbox"/>	<input type="checkbox"/>	EOL	silent	200ms	1s	Disable
7	Input 7	Tamper Alarm	Tamper Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EOL	24 hours	200ms	1s	Disable
8	Battery	Low Battery	Battery Restore	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	NC	silent	65000ms	6000s	Disable

In8 Low Battery parameters


Alarm voltage V Calibration

Restore voltage V

Fig. 36

5.8. Window Event SMS Text

In order to open Service Text Summary window, it is necessary to select the item Event SMS Text from the content.

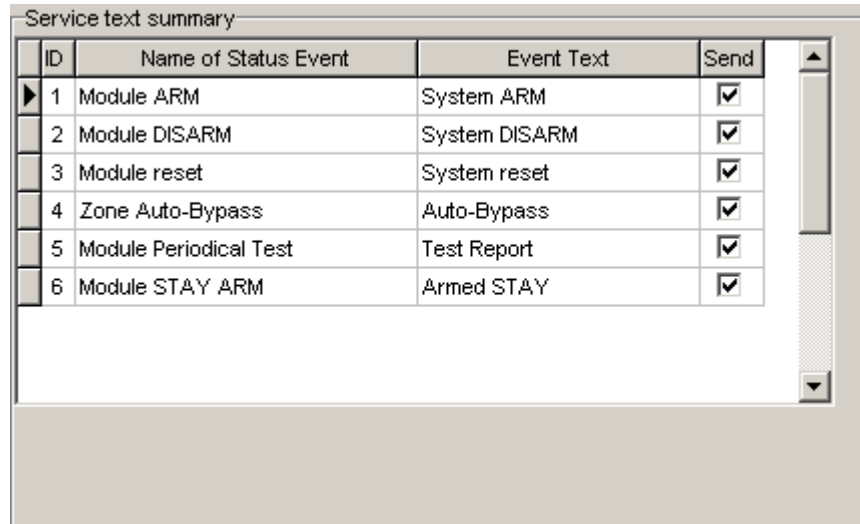

The screenshot shows a window titled "Service text summary" containing a table with the following data:

ID	Name of Status Event	Event Text	Send
1	Module ARM	System ARM	<input checked="" type="checkbox"/>
2	Module DISARM	System DISARM	<input checked="" type="checkbox"/>
3	Module reset	System reset	<input checked="" type="checkbox"/>
4	Zone Auto-Bypass	Auto-Bypass	<input checked="" type="checkbox"/>
5	Module Periodical Test	Test Report	<input checked="" type="checkbox"/>
6	Module STAY ARM	Armed STAY	<input checked="" type="checkbox"/>


Fig. 37

Explanation of fields of Service text summary window:

Name of Status Event	Event name
Event Text	Event test, which may be changed
Send	If the check box is checked, the message about a certain event will be sent to a user, if it is configured in [Communications] window.

5.9. Window [Text summary]

In order to open **Text summary** window select **Text table** (Fig. 38) from the left side of the Window. This Window is intended for creation of equivalents.

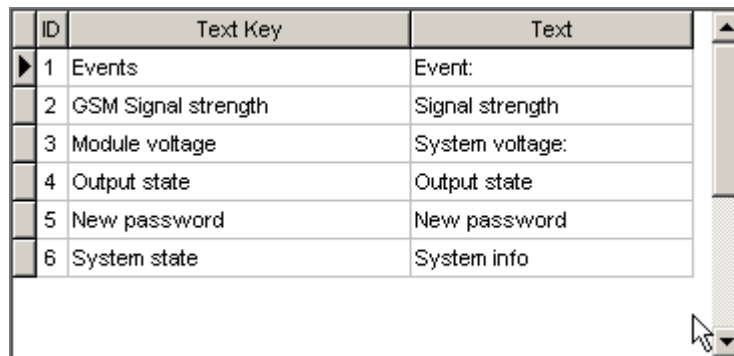

ID	Text Key	Text
1	Events	Event:
2	GSM Signal strength	Signal strength
3	Module voltage	System voltage:
4	Output state	Output state
5	New password	New password
6	System state	System info

Fig. 38

Explanation of fields of [Text summary] Window:

ID	Text number
Text name	Text in English
Text	Equivalent of the text available in „Text name“, which may be changed. Words available in this field will comprise messages being sent.

5.1. Window Temperature Controller

In order to open window of **Temperature Controller Settings**, select **Temperature Controller**.


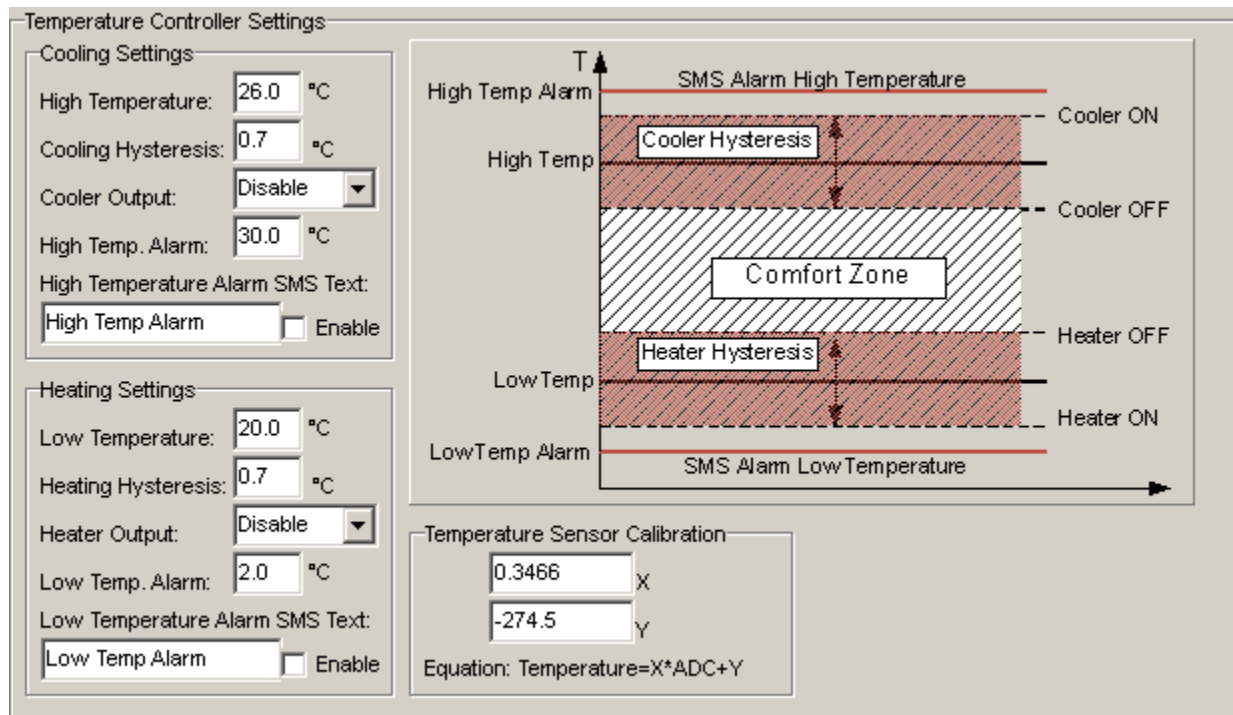


Fig. 39

High Temperature	Temperature value upon which cooling device will be activated.
Cooling Hysteresis	Cooling device control hysteresis
Cooler Output	To select output for cooling device control. If cooling device is not used, select the option Disable.
High Temp. Alarm	Temperature value upon reaching which high temperature alarm will be send.
High Temperature Alarm SMS Text	High temperature alarm SMS text is being recorded.
Enable	To send high temperature alarm.
Low Temperature	Temperature value upon which heating device will be activated.
Heating Hysteresis	Heating device control hysteresis
Heater Output	To select output for cooling device control. If heating device is not used, select the option Disable.
Low Temp. Alarm	Temperature value upon reaching which low temperature alarm will be send.
High Temperature Alarm SMS Text	Low temperature alarm SMS text is being recorded.
Enable	To send low temperature alarm.
Temperature Sensor Calibration	Temperature sensor value calculation coefficients. They might be used to calibrate temperature measurements. Temperature calculation formula $T=X*ADC+Y$
X	X- multiplier
Enable	Y - coefficient.

Following the equation $Temperature=X*ADC+Y$ and by selecting X and Y coefficients. Temperature calibration may be performed in software SERA in testing window. It is necessary to have accurate thermometer in order to measure temperature at least in two points. In testing window to read temperature ADC indications in these points. Following the equation “ $Temperature=X*ADC+Y$ ” to calculate X and Y coefficients. Calculated X and Y coefficients should be programmed in the module. It is easy to calculate X and Y coefficients in MC Excel by using trendline.

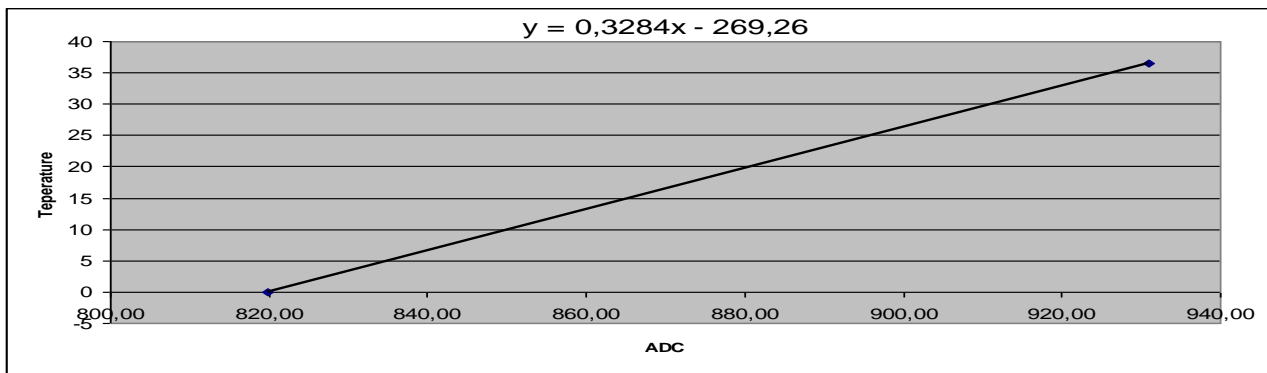

5.2. Window [Testing and Diagnostic window]

In order to open [Testing and Diagnostic window] select [Testing and Diagnostic] option. This Window is intended for testing of the module, for operation analysis and diagnostics. This feature is very convenient when installing the module.

Testing window

Inputs (ADC values)

<input type="checkbox"/> IN1	350	
<input type="checkbox"/> IN2	349	
<input type="checkbox"/> IN3	355	
<input type="checkbox"/> IN4	355	
<input type="checkbox"/> IN5	349	
<input type="checkbox"/> IN6	544	
<input type="checkbox"/> IN7	543	
<input type="checkbox"/> IN8	619	Sys. Voltage
<input type="checkbox"/> IN9	852	Temperature

☒ ARM/DISARM/Touch Input

Outputs states

<input checked="" type="checkbox"/> Out1	Out1 On/Off
<input checked="" type="checkbox"/> Out2	Out2 On/Off
<input checked="" type="checkbox"/> Out3	Out3 On/Off
<input checked="" type="checkbox"/> Out4	Out4 On/Off

GSM info

IMEI: 356895030028578

SIM card: : READY

Signal level: 20 [Signal strength bars]

Registration: Registered, home network

SMS Service Centre Address: "+37069899992",14

ARM/DISARM System

System State: **ARM**

System voltage: 14.17 V 619.26 ADC

Temperature: 20.8 °C 852.04 ADC

Switch on testing Switch off testing

Fig. 40

Explanation of fields of Testing Window:

Inputs	IN1	This is indication of each input. Checked check box nearby the appropriate input means that the said input – zone was activated. Number near each input is a coefficient indicating input voltage.
	IN2	
	IN3	
	IN4	
	IN5	
	IN6	
	IN7	
	IN8	
	IN9	
	ARM/DISARM method (Touch input)	Control input "Touch" state
Outputs states	Out1	Checked box nearby the appropriate output means that this output is active.
	Out2	
	Out3	
	Out4	
	Button Out1 On/Off	By pressing buttons (on/off) output states are controlled. It is convenient to use when it is necessary to test outputs operation.
	Button Out2 On/Off	
	Button Out3 On/Off	
	Button Out4 On/Off	
GSM info	IMEI	IMEI number of GSM modem available in the module.
	SIM card	If note READY is visible, it means that SIM card is fully functioning. Otherwise, check whether PIN code request is off or replace SIM card.
	Signal level	Signal strength of GSM communication.
	Registration	State of GSM modem registration to GSM network.
	SMS Service Centre Address	SMS centre number. This number should be checked if it is correct. If this number is incorrect. SMS messaging may be impossible. This number may be changed after inserting SIM card into any mobile phone.
System voltage	Power supply voltage the module is connected to. Nearby number is value of ADC voltage. When multiplying this number by the coefficient Fig. 36, voltage value (V) will be achieved.	
Temperature	Temperature of temperature sensor. The number nearby is temperature ADC value used to calculate temperature according to the formula: $Temperature = X * ADC + Y$. X and Y coefficients may be changed in temperature window in order to additionally calibrate temperature measuring. To review these coefficients refer Fig. 39 After performing additional calibration, it is possible to achieve a very accurate temperature measurement up to 0,1 C in a narrow temperature measurement range.	
System State	ARM	Indication that at the moment the module is in ARM mode.
	DISARM	Indication that at the moment the module is in DISARM mode.
	WAITING ARM	Module mode when Exit Delay time is being calculated.
ARM/DISARM command. button	After pressing the button ARM/DISARM mode should be changed	
Switch on testing mode button	Pressing this button starts testing of the module.	
Switch on testing mode button	Pressing this button stops testing of the module.	

6. Saving module configuration into the file

After configuration of the module, all settings may be saved at PC. It enables to save time, when next time the same configuration will be used – it will not be necessary again to set the same parameters.

If you want to save that is already recorded by the module, firstly you must read configuration of the module. [File > Read Device] see Fig. 41 In order to save configuration go to [File > Save As... [Fig. 42 or press icon [Save] icon Fig. 43. Enter configuration parameter in the displayed table and press „OK“.

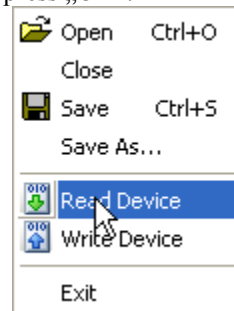


Fig. 41

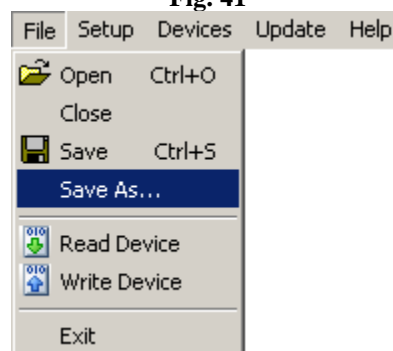


Fig. 42

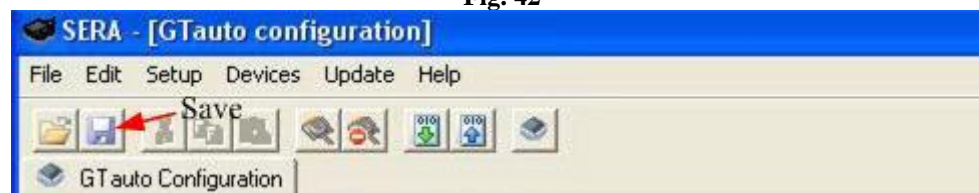


Fig. 43

7. Installing of saved configuration into the module

In order to start saved configuration go to [File] > [Open] Fig. 44 or press [Open] icon Fig. 45

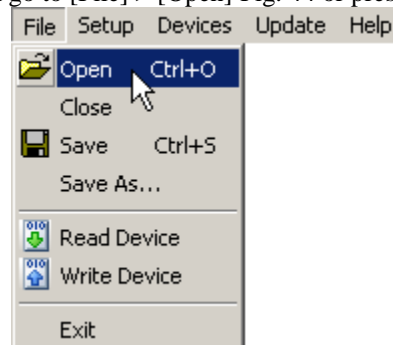


Fig. 44

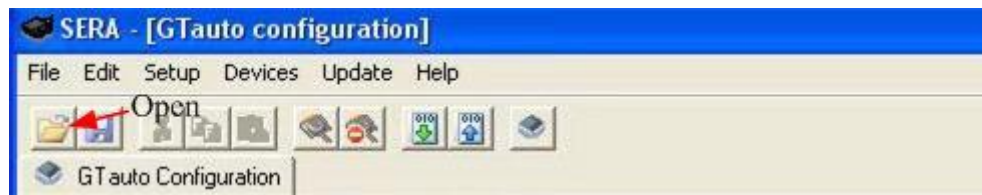


Fig. 45

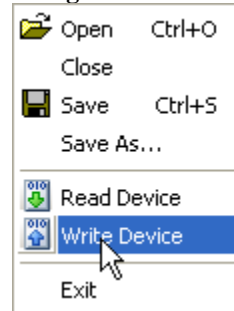


Fig. 46

Click the file of saved configuration or press “Open” in displayed Window. Now all parameters of saved configuration have been loaded into application SERA. If no any other changes are necessary, press [File] > [Write Device] Fig. 46 in order to send this configuration into the module.


8. Updating of firmware

The latest software version may be found www.topkodos.lt . If a version of your module is older, please update it (to find out the version of your GTCOM software version ((**FW firmware**) send Test SMS from your module). For this purpose press [Update] in the menu list or [Update module] icon, Fig. 47. Specify the file of the newest software version and press [Open]. Follow further instructions of the program.




Fig. 47


Select Firmware file of the module:

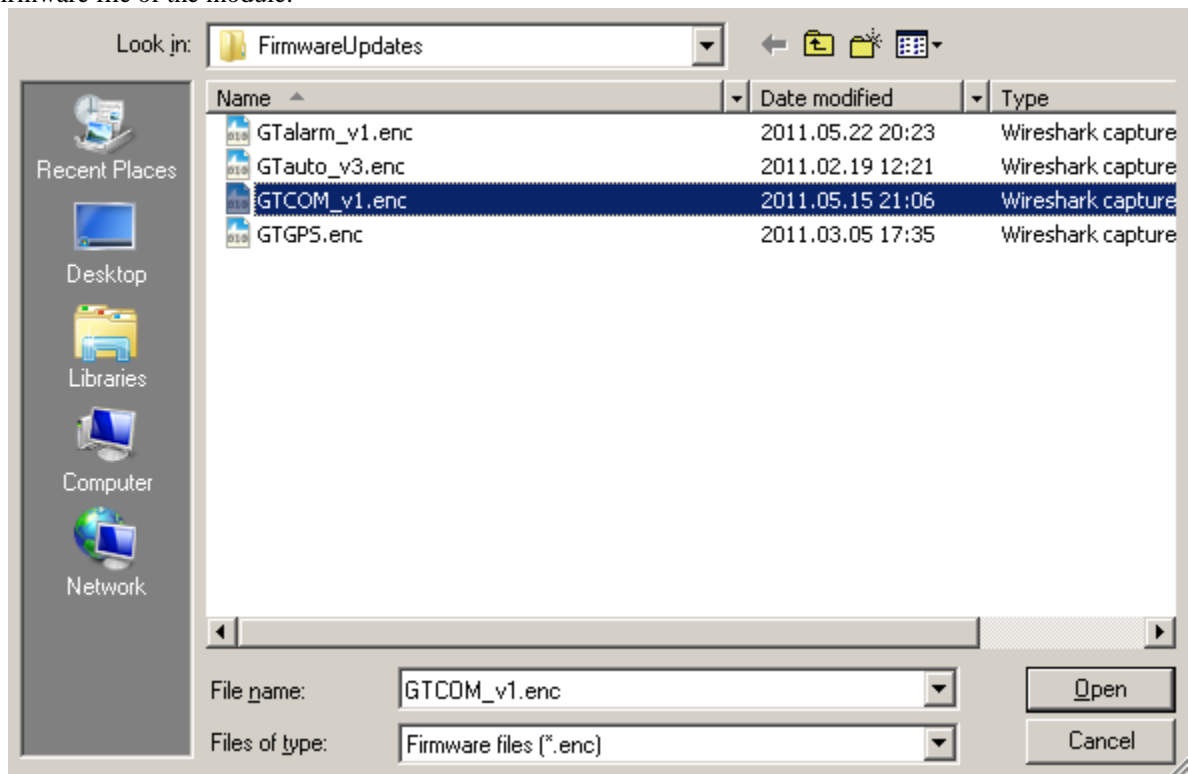


Press RESET button once and click “OK” in the displayed table.

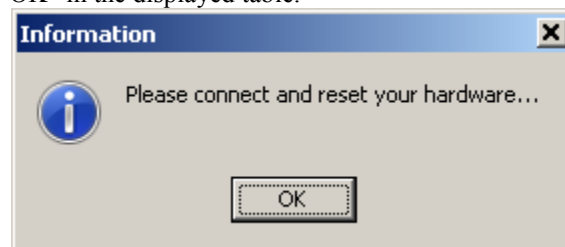


You will see the following progress bar at the bottom of the window:



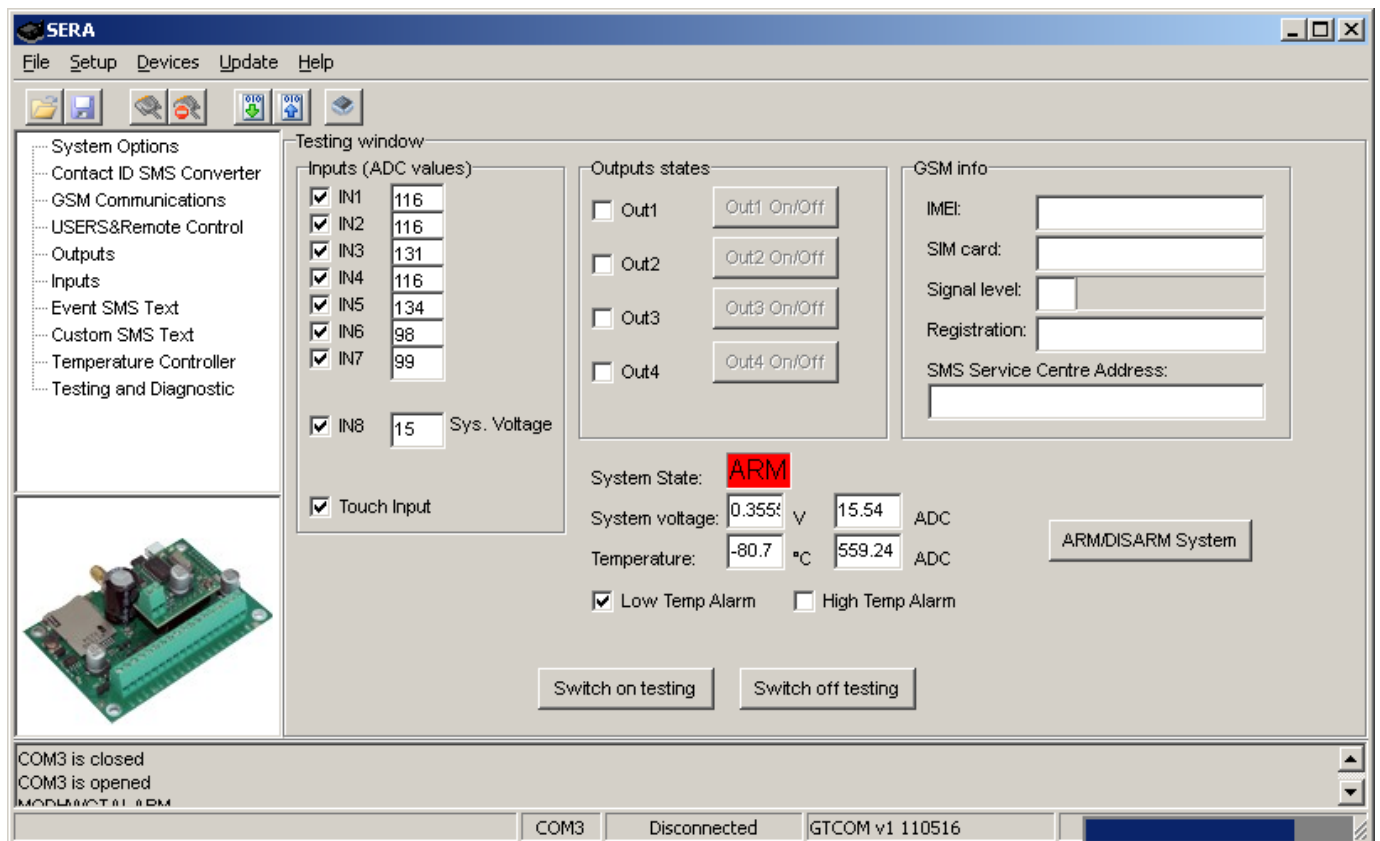


When updating of firmware will be finished, the system will displayed the table below:

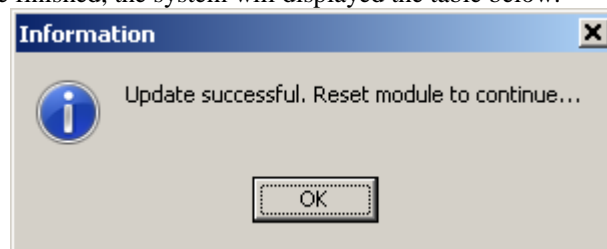

Then press RESET button. Then press OK.

Read configuration of the module [File->Read Device].

Go to **Main Window**. Check whether the firmware has been updated. **FW: xxxxxxxx**

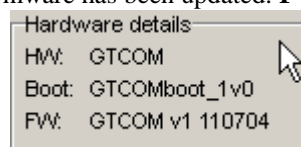

Programme version is also visible below:

